



This supplementary instruction manual contains only the steps specific to the LAZER ZX-RR assembly. Use it together with the LAZER ZX-R instruction manual.

1 • The shocks changed. Use Bag No.1,3,6


- | | |
|------------------------------------|---|
| <p>16 E-ring</p> <p>8</p> | <p>163 3×7×2mm Collar</p> <p>8</p> |
| <p>159 O-ring (Blue)</p> <p>8</p> | <p>154 3×6×3mm Collar
(incl.with front hubs)</p> <p>2</p> |
| <p>160 3×6×2mm Collar</p> <p>4</p> | |
| <p>161 3×7×1mm Collar</p> <p>4</p> | |
| <p>162 C-ring</p> <p>4</p> | |
| <p>20 5.8mm Ball</p> <p>8</p> | |

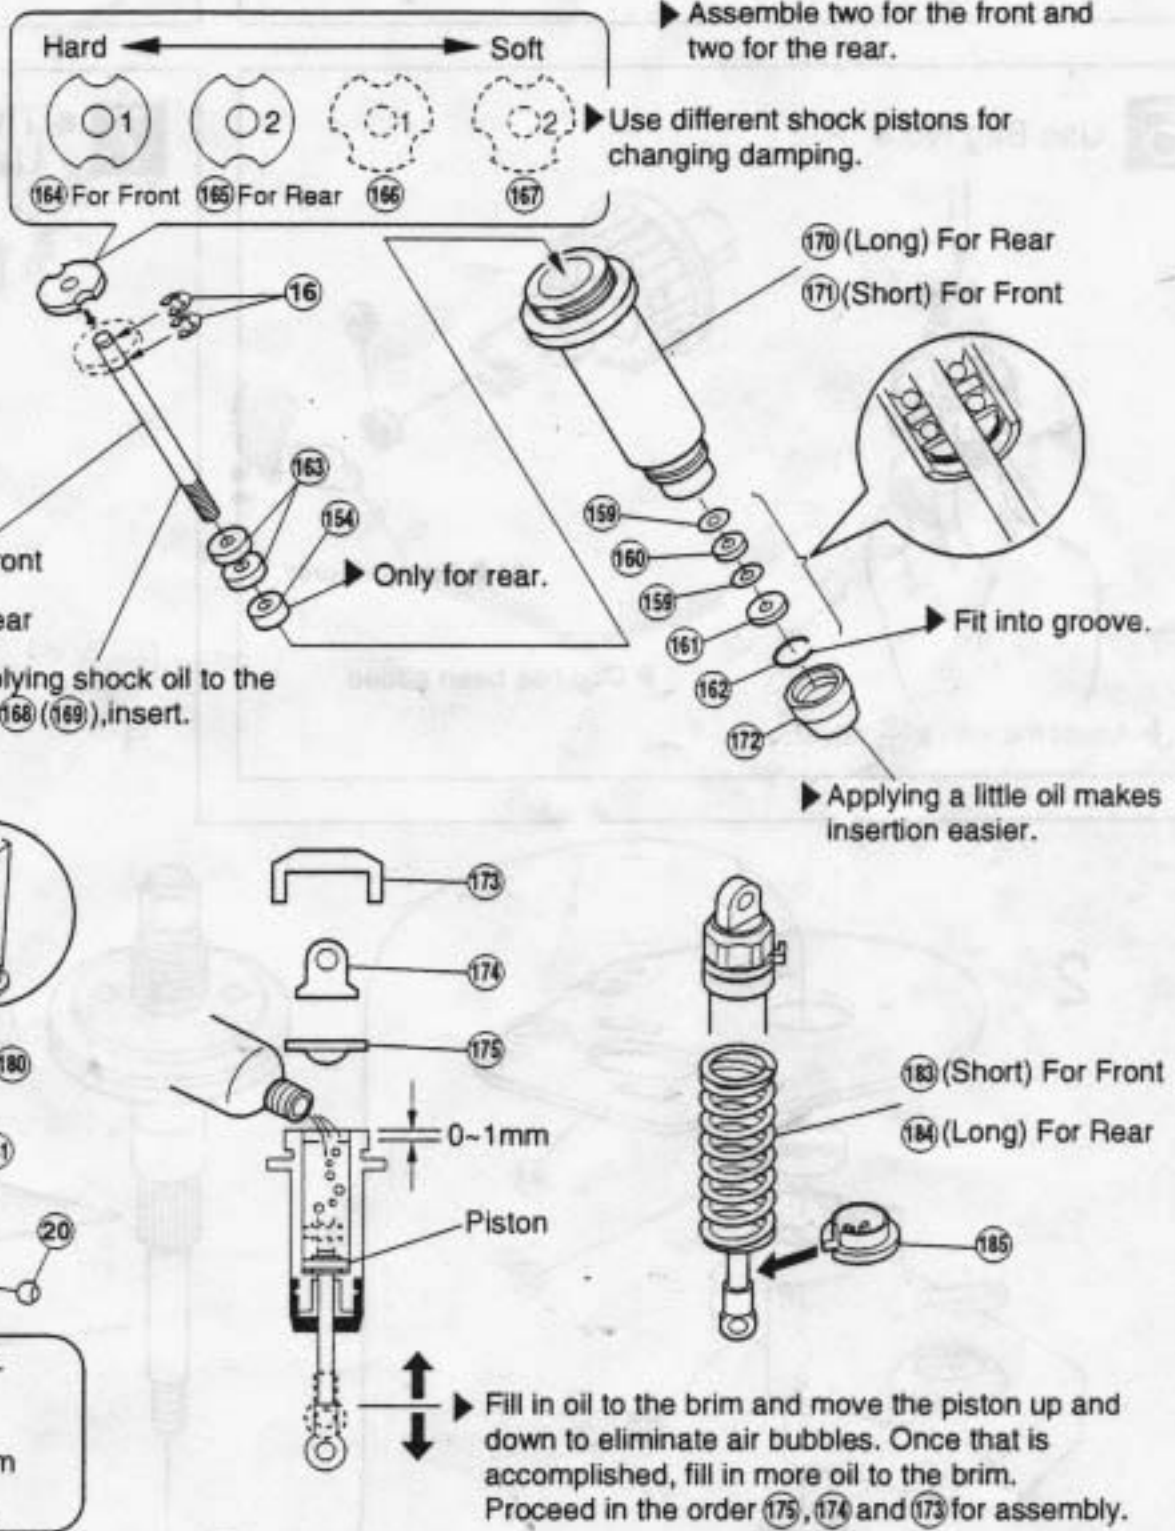


2 • Assemble the control rods. as shown below. Use Bag No.3

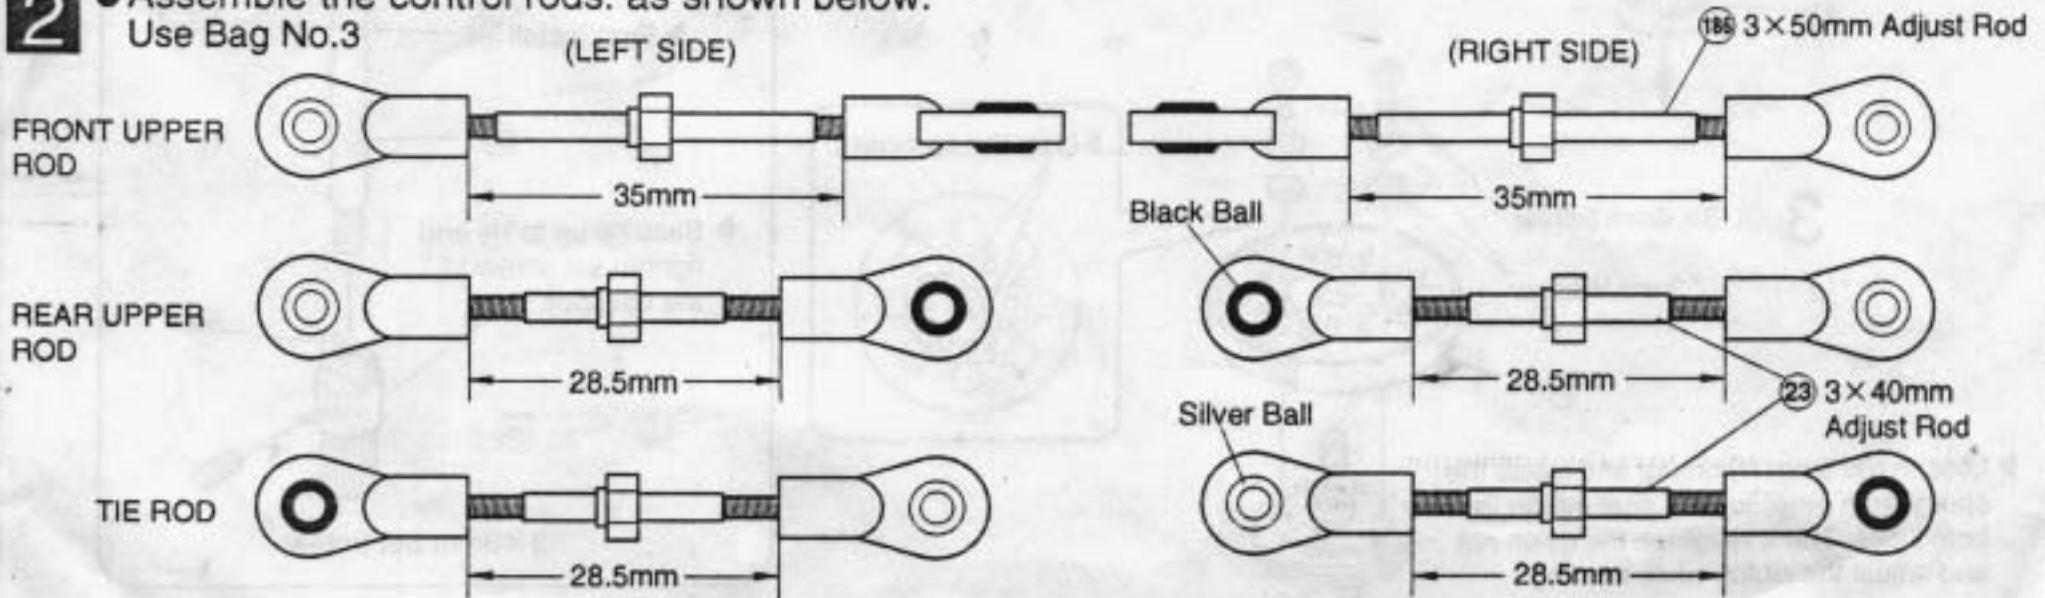


- 3** • Trim the gear cover as shown.
Use Bag No.4

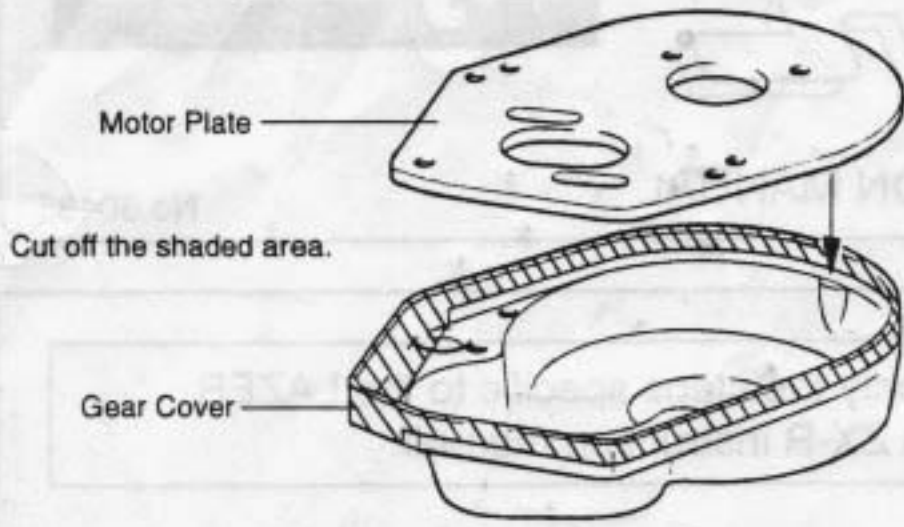

- 4** • Instead of 3mm nuts, tapered washers are used.
Use Bag No.3

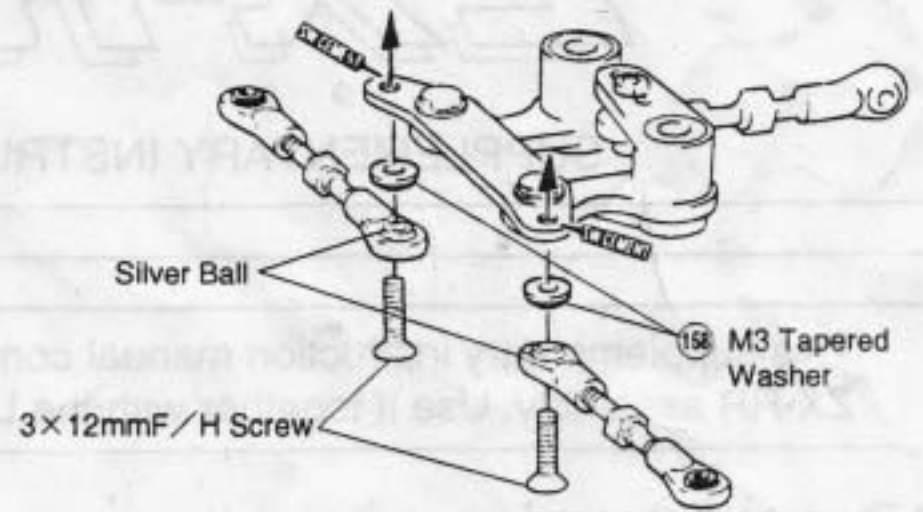


- 5** Use Bag No.4

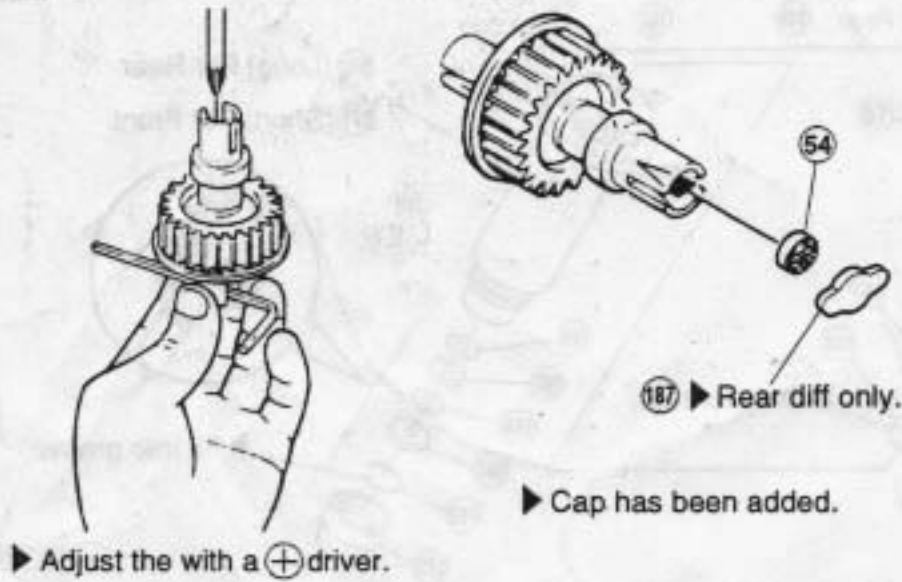

- 7** • The slipper clutch changed.
Use Bag No.4

1

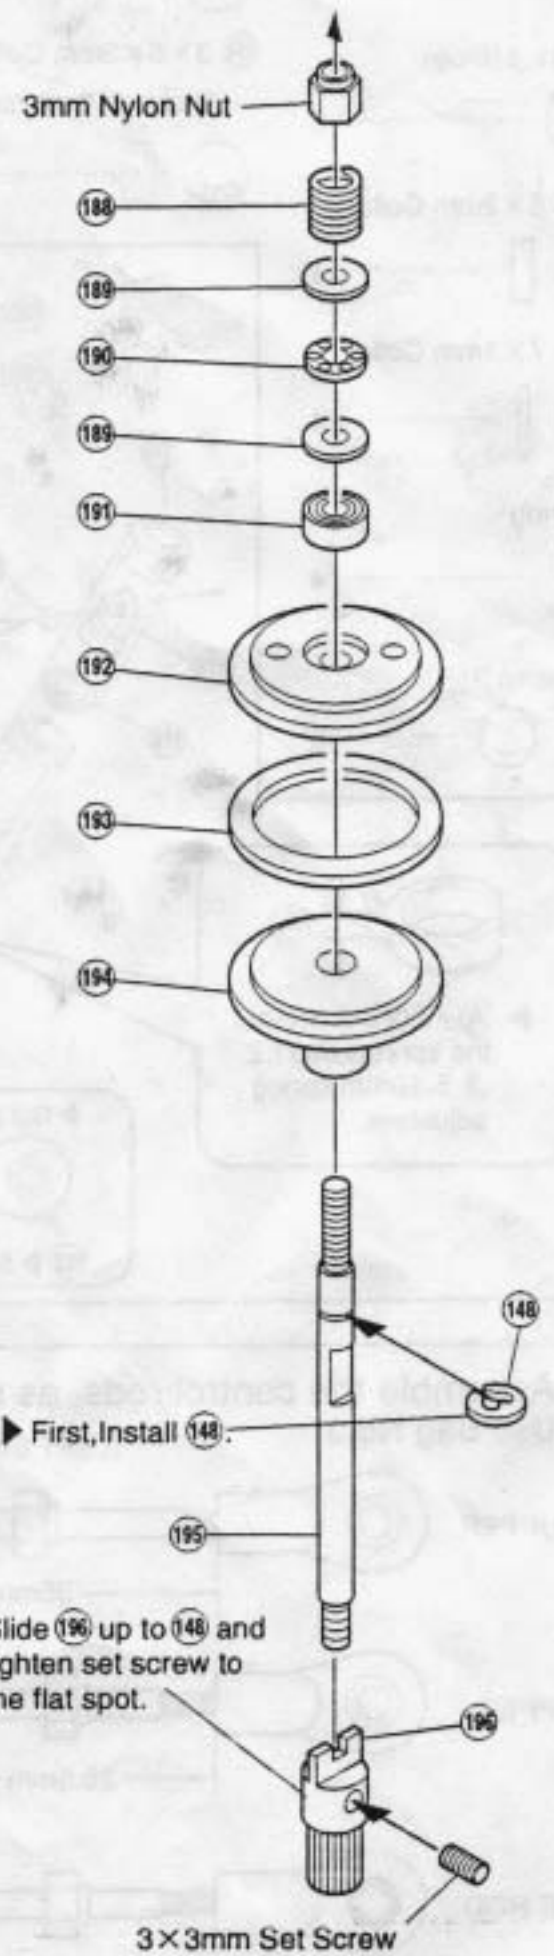

2

