



Hanson Business Park, 71-73 Tenter Road, Moulton Park, Northampton, NN3 1AX, England.

Performance and technology that YOU CAN BUY!



NEW "BLUE" NATURAL COMPOUNDS

The whole range of Schumachers world famous CAT tyre range is now being produced in a secret new natural compound of the very highest quality. The new compound designated "BLUE" gives very high grip level in slippery conditions and is strong enough to give massive bite when the traction is high. If you are racing to win always insist on original Schumacher tyres.

MINISPIKE DIRT TYRES

We now offer the full range of dirt eating Minispike tyres including the original 5 x 24 Low Profiles, the intermediate 15 x 12, and the BIG one, at maximum legal diameter the 15 x 15 Minispike offers an incredible 225 grip searching spikes. Every tyre featuring specially designed internal ribbing for total tread control.

INSIST ON SCHUMACHER



BLUE	SOFT	HARD	DESCRIPTION
T687E	T650T	T651U	4 x 20 Spike — Rear
T688F	T652V	T653W	3 x 20 Spike — Front
T689G	T654X	T655Y	2 x 20 Stud — Front
T690H	T658B	T659C	5 x 24 Minispike — Rear
T691I	T660D	T661E	4 x 24 Minispike - Front
T692J	T662F	T663G	6 x 20 Block — Rear
T693K	T664H	T665I	4 x 20 Block — Front
T694L	T666J	T667K	6 x 20 Cut Spike — Rear
T695M	T668L	T669M	1 + 20 Rib Spike - Front

FRONT RIB



FRONT STUD

6x20 CUT SPIKE

BLUE	SOFT	HARD	DESCRIPTION
T696N	T672P	T673Q	4 x 20 Cut Spike — Rear
T697O	T674R	T675S	3 x 20 Cut Spike — Front
T698P	T676T	T677U	Rib — Front
T679W	N.A.	N.A.	15 x 12 Minispike — Rear
T681Y	N.A.	N.A.	11 x 12 Minispike — Front
T683A	N.A.	N.A.	15 x 15 Minispike — Rear
T685C	N.A.	N.A.	11 x 15 Minispike — Front
_	T670N	_	"Sponges" on Wheel — Front
_	T6710	_	"Sponges" on Wheel — Rear

FRONT RIB SPIKE

TYRE COMPOUND SELECTION

The very latest "BLUE" compound provides massive grip under a very wide variety of track conditions.

We recommend the "BLUE" compound as every racers first choice.

The original "HARD" CAT tyres, famous the world over.

The "SOFT" compound gives ultimate traction on very slippery surfaces.

AVAILABLE FROM ALL GOOD MODEL SHOPS

SCHUMACHER



INTRODUCTION

Congratulations on choosing the COUGAR.

The COUGAR has been designed so that adjustments can be made to the car to suit different track conditions, enabling you to be competitive at all times.

The straight forward modular construction and clear concise instructions will give experts and beginners alike superb reliability and great performance.

We hope you have fun and enjoy your racing!

Coul Schuwoch

IMPORTANT SAFETY NOTES

- 1. Select an area for assembly that is away from reach of small children. The parts are small and can be swallowed by children causing choking and possible internal injuries.
- Shock fluids, grease and adhesives should be kept out of childrens reach. They are not toxic, but were not intended for human consumption.
- 3. Exercise care when using any hand tools, sharp instruments and power tools during construction.
- 4. Carefully read all manufacturers warnings and cautions for any glues or paints that may be used for assembly purposes.

In line with our policy of continuous development the exact specification of the kit may vary.



Places to put threadlock. (It will prevent the screws and nuts vibrating loose.



Points where silicone grease (MS 1 or equivalent) should be applied. (It will reduce friction and assure smooth movement.)



Points where oil should be applied (Light machine oil, 3 in 1 or similar.)

MISSING OR DEFECTIVE PARTS

In the unlikely event of problems with your new kit you should contact the model shop where purchased, quoting part number, bag number and batch number for both the bag and the kit.


SCHUMACHER RACING PRODUCTS

Hanson Business Park · 71-73 Tenter Road · Moulton Park · Northampton · NN3 1AX

THINGS NEEDED BESIDES THE KIT

(2 Channel Radio System)

Two types of radio control sets are on the market, the stick type and the steering wheel type. Choose which ever you like.

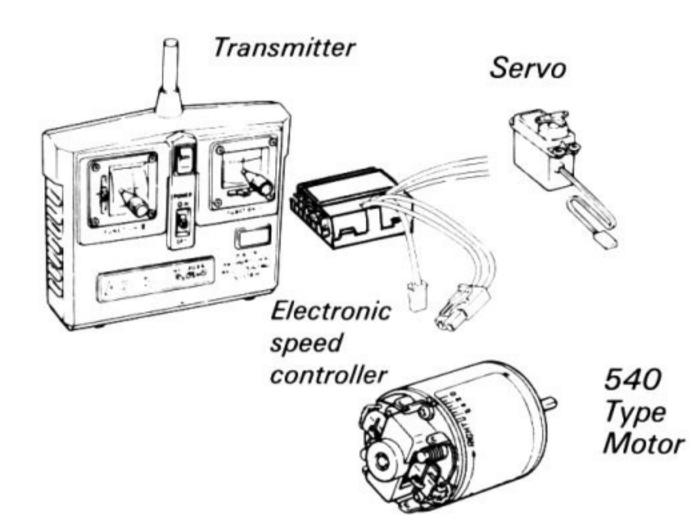


Receiver



(Battery for Radio system)


AA Size Battery (For Transmittor 8 pcs.)

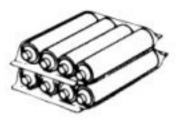




7.2V racing battery

Do not use excessive force when tightening the self-tapping screws, or you may strip the thread in the plastic. It is recommended to stop tightening it when the threaded part on the screw goes into the plastic part and you feel some resistance from the tightening.

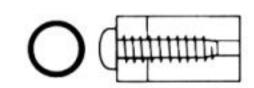

Good

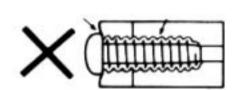


Over tighten and may strip the thread in the plastic

CH HD Cheese head

CSK HD Countersunk head

PAN HD Self tap thread

CAP HD Cap head

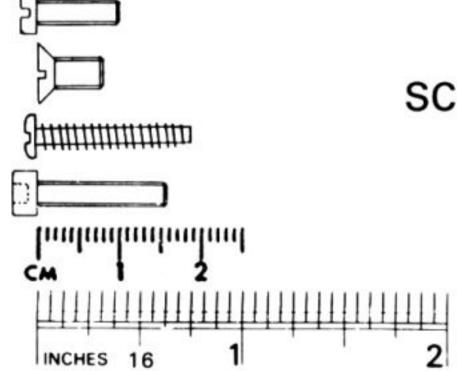

SCREW IDENTIFICATION CHART


TOOLS REQUIRED FOR ASSEMBLY


Screwdriver
Spanner 5.5mm A/F
Spanner 1/4 A/F
Drill (for holes in bodyshell & covers)
Pliers
Vice
Sharp Knife
File
Pointed nose pliers or cutters

MATERIALS REQUIRED

(not in kit)

Threadlock
Light oil for shock absorbers
Polycarbonate paint for bodyshell
Motor, batteries, radio control equipment
speed controller

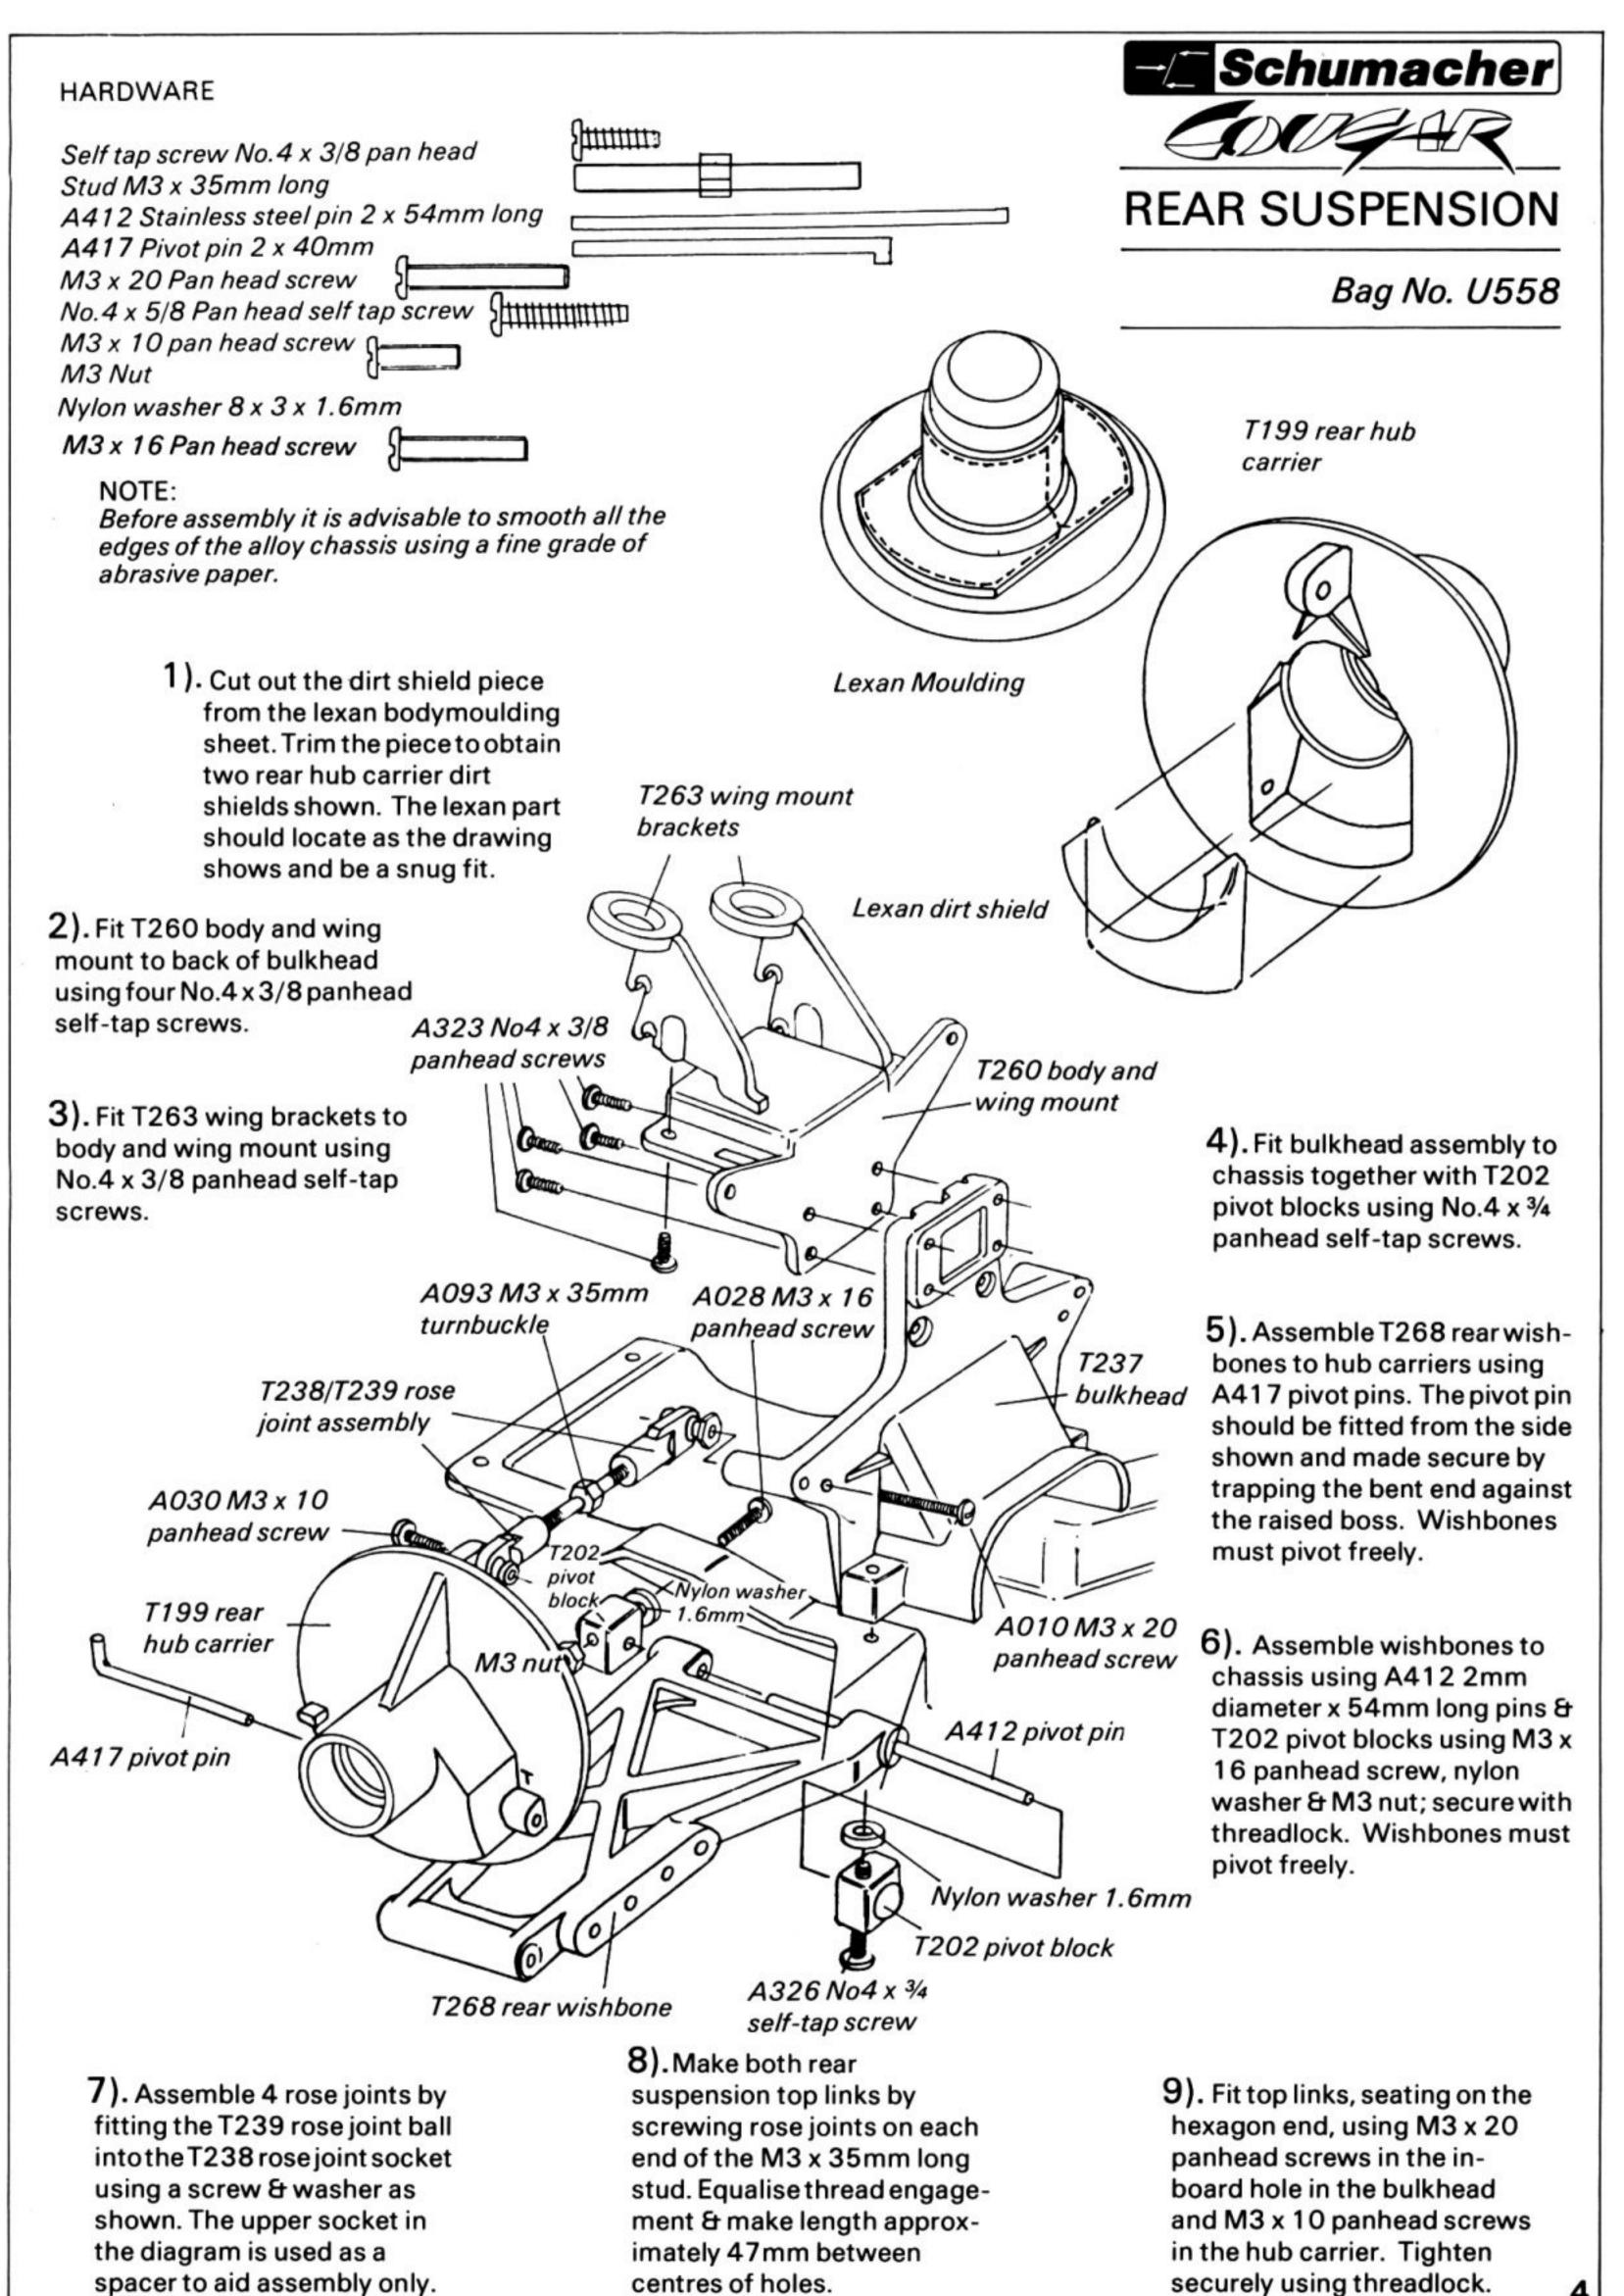

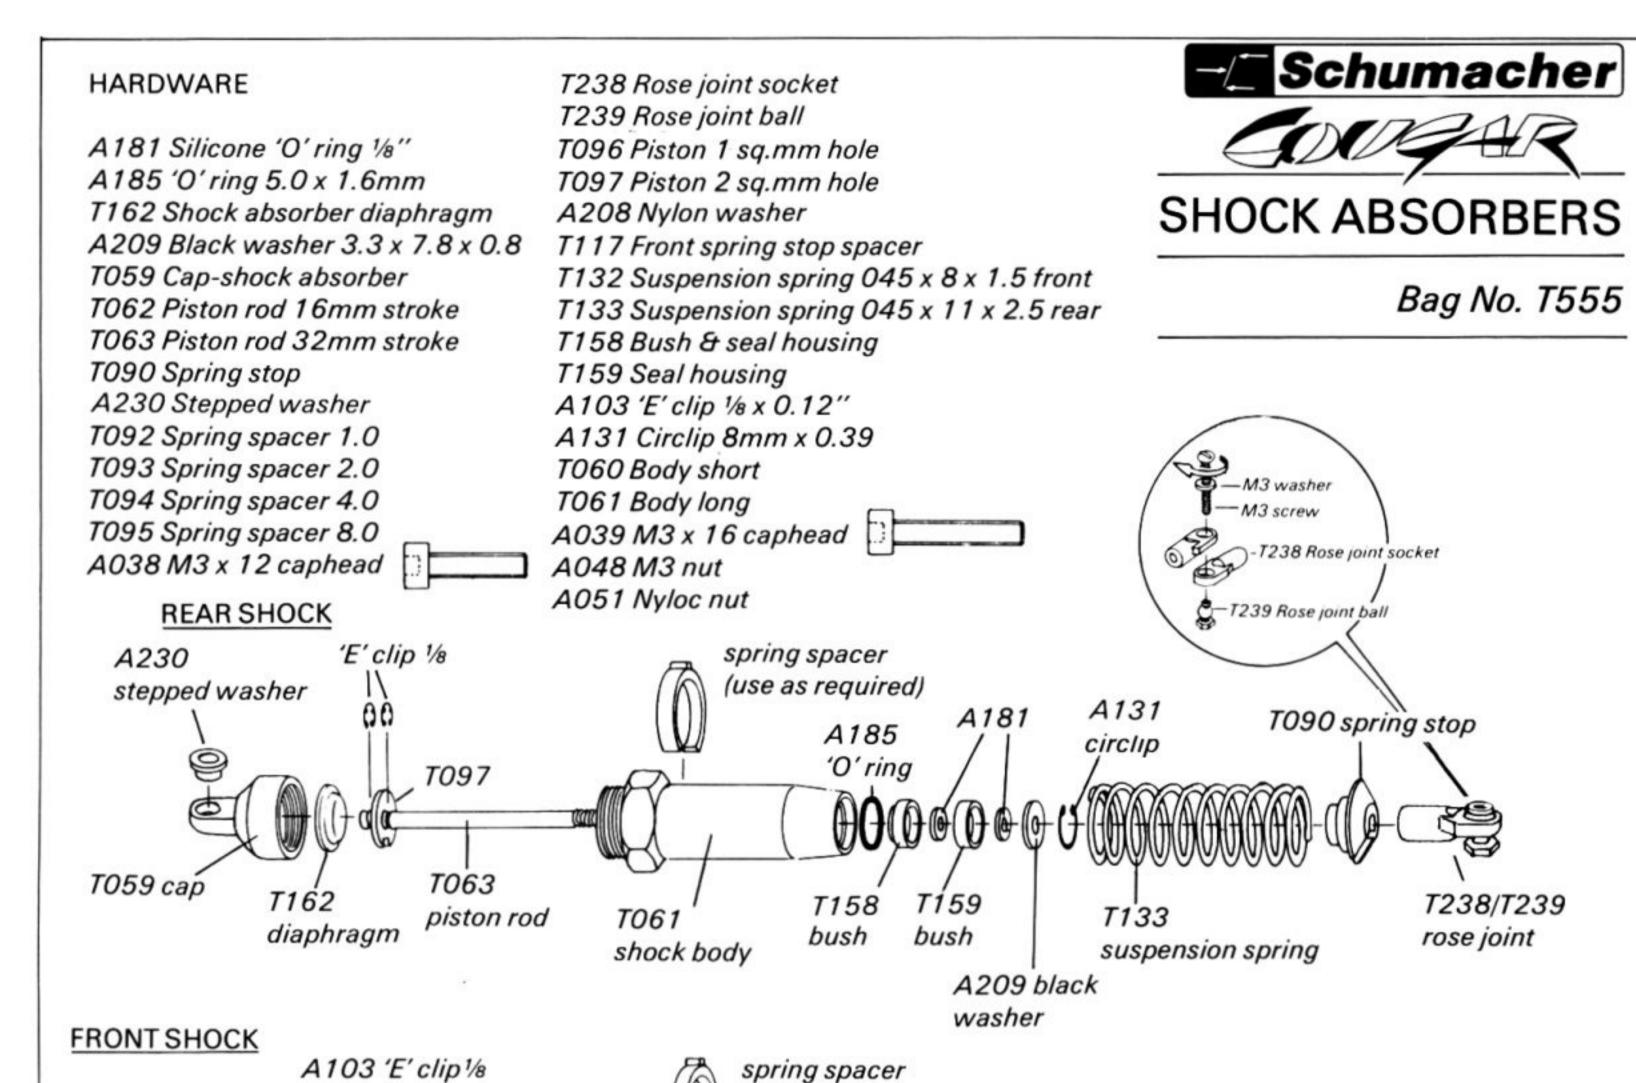

T062 piston A185 'O' ring rod MARARA T096 A181 T238/T239 T117 spacer T132 T059 cap 'O' ring T162 rose joint T158 bush tube suspension spring T060 diaphragm A209 black shock body washer Deburr circlip grooves and The above sequence is absorbers and retain with a T090 threads on piston rods T062/ the same for all four shock spring stop.

(use as required)

T159 bush

T063 before assembly to avoid damage to the seals. Fit a small 'E' clip A103 to the lower groove in the front T062 piston rod, followed by a T096 piston (small notch) retained with a second 'E' clip.

Repeat the procedure with the T063 rear piston rod and T097 piston (large notch). Make sure all the 'E' clips are secure in their grooves; Check assembled piston in shock absorber body for clearance over the whole length of stroke.

Diagrams show the order of assembly for the shock absorber seals and bushes; the sequence being:-A185 'O' ring; T158 bush and seal housing; A181 'O' ring; T159 seal housing; A181 'O' ring A209 black washer; and finally, the A131 circlip to retain the assembly.

absorbers. Lightly oil the four piston rods. Carefully push rods down through their respective shock absorber bodies to avoid damage to the seals. Screw two T238 rose joint assemblies to the bottom of the rear shock absorberpiston rods; do not damage the piston rod. Cut two 6mm lengths from the black T117 spacer tube and slide one of these onto each front piston rod before fitting the two T238 rose joint assemblies.

With the piston rods extended, fill the shock absorbers with a light oil. Work the pistons up and down to release any trapped air. Fit the T162 shock absorber diaphragm, into the oil filled shock absorber body so that all air is expelled. Fit T059 cap and check for smooth action. Fit the front suspension springs T132 to the front shock

Repeat the procedure for the rear shock absorbers using the T133 rear suspension springs. Insert spring spacers T092/ T093/T094/T095 as required to adjust the ride height. Press the A230 stepped washer into the TO59 cap of each rear

T090 spring stop

shock absorber.

Fit M3 x 16 cap head screw to T260 mount and lock in place using M3 nuts. (see main diagram). Fit rear shock absorber and retain with one A208 nylon washer and one A051 nyloc nut. Do not fully tighten nut, shock absorber must have some clearance over the full range of suspension travel. At the bottem, screw M3 x 12 caphead screw through rose joint ball and into the third hole out in the lower wishbone; hexagon head towards wishbone.


Self-tap screw No.2 x 1/4" panhead SHIIIII

Nyloc nut M3

T228 1/8" pivot pin short
'E' clip





Bag No. U558

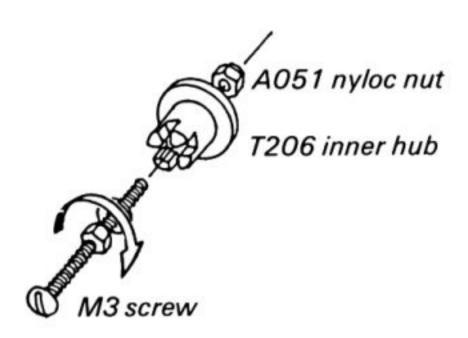

1). Push an A051 nyloc nut into the two T338 inner hubs. Pull into position using an M3 screw, washer and nut as shown.

2). Push T338 inner hub into the A533 bearing with the flange of the hub next to the brown bearing shield. Push the bearing into the T205 retainer and secure to the T328 steering block using 4 No.2 x 1/4" panhead self-tap screws. Repeat the assembly for the other steering block.

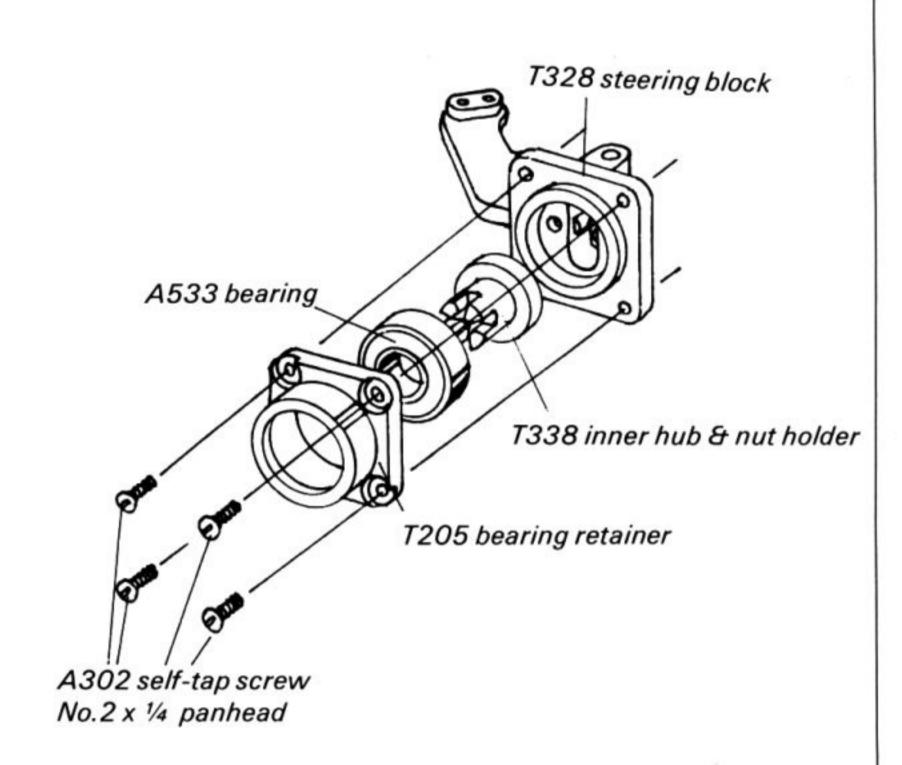

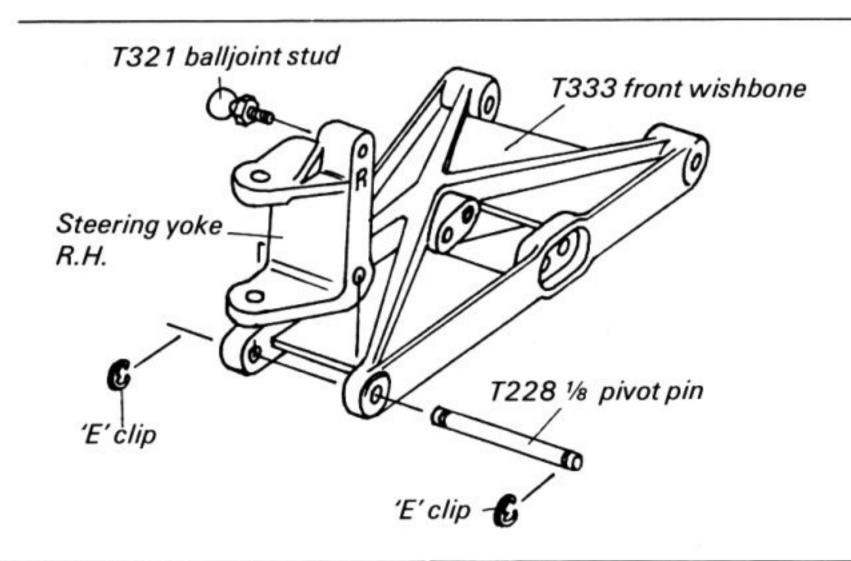

3). Screw a T321 ball joint stud to the steering yoke RH (marked with an 'R') as shown. Fit the T332 steering yoke RH to T333 front wishbone using a T228 1/8" pivot piin as shown Secure the yoke using 2 'E' clips. The yoke must pivot freely. Repeat the assembly for the lefthand steering yoke.

T339 Inboard wishbone pivot T228 1/8" pivot pin short

'E' clips


M3 x 12mm steel screw countersunk

M3 steel washer

M3 x 6mm steel screw cheesehead



Bag No. U558

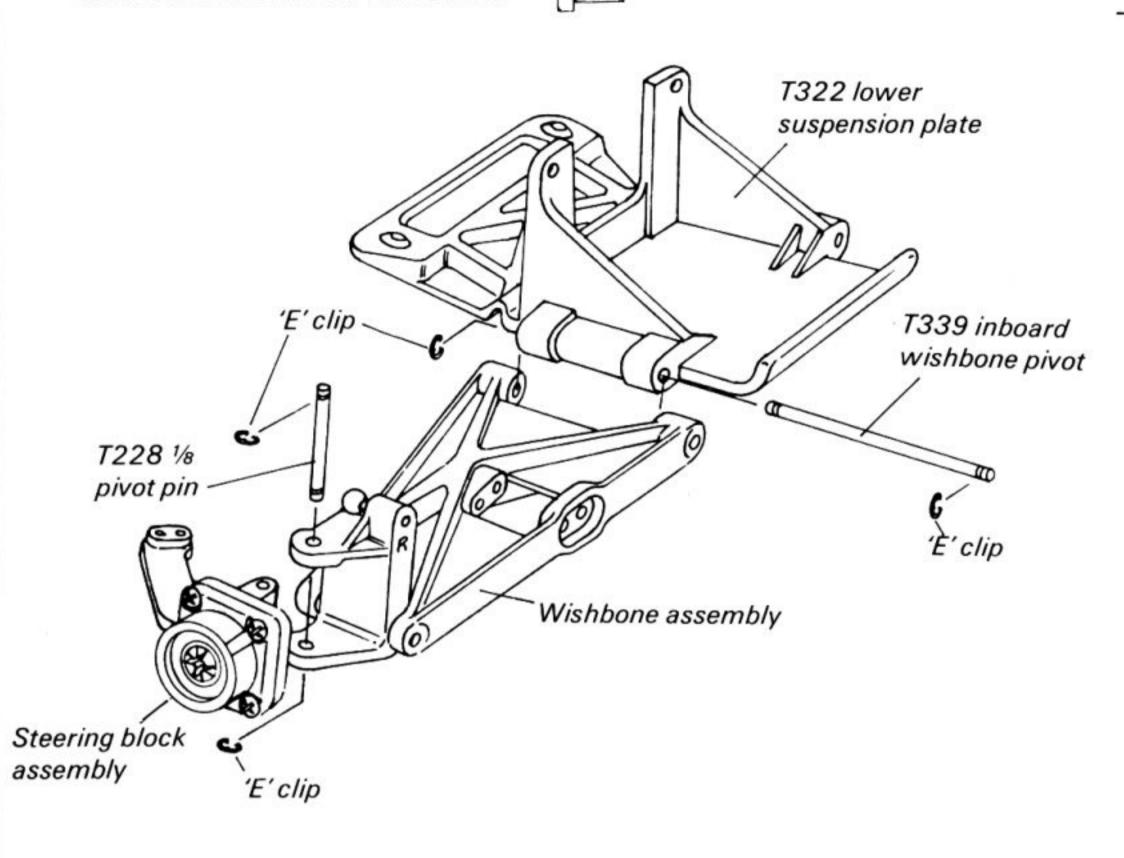

4). Fit a steering block assembly to the righthand steering yoke using a T228 1/8" pivot pin and secure with 2 'E' clips. The steering block must pivot freely. Fit the complete wishbone assembly to the T322 lower suspension plate using T339 inboard wishbone pivot pin. Secure with two 'E' clips. The wishbone must pivot freely. Repeat the assembly for the lefthand side.

5). Screw T321 ball joint studs into the outer holes in the T335 centre trackrod as shown. Fit the T340 steering lever and T341 radius arm to the T335 centre trackrod using T242 steering pivot A225 steel washer and A032 M3 x 6mm cheesehead screws. Both levers must pivot freely. Fix screws firmly but do not overtighten and secure with threadlock.

Please Note: T335 Centre trackrod must be assembled with the ball joint stud offset to the rear

T341

radius arm

T321 ball joint

stud


T335 Centre tackrod

T335 centre tackrod


T335 centre tackrod

T337 ball joint

T337 ball joint

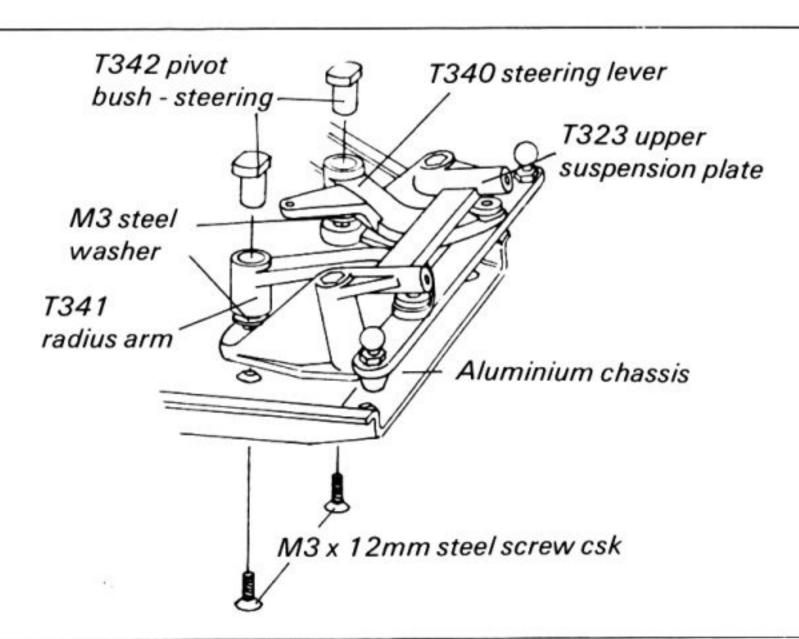

6). Place the T323 upper suspension plate onto the front of the aluminium chassis in the position shown. Fit the steering levers and trackrod assembly to he chassis using two aluminium T342 pivot bushes, steel washers and A023 M3 x 12mm countersunk screws as shown. Fix screws firmly but do not over tighten and secure with threadlock. The levers must pivot freely.

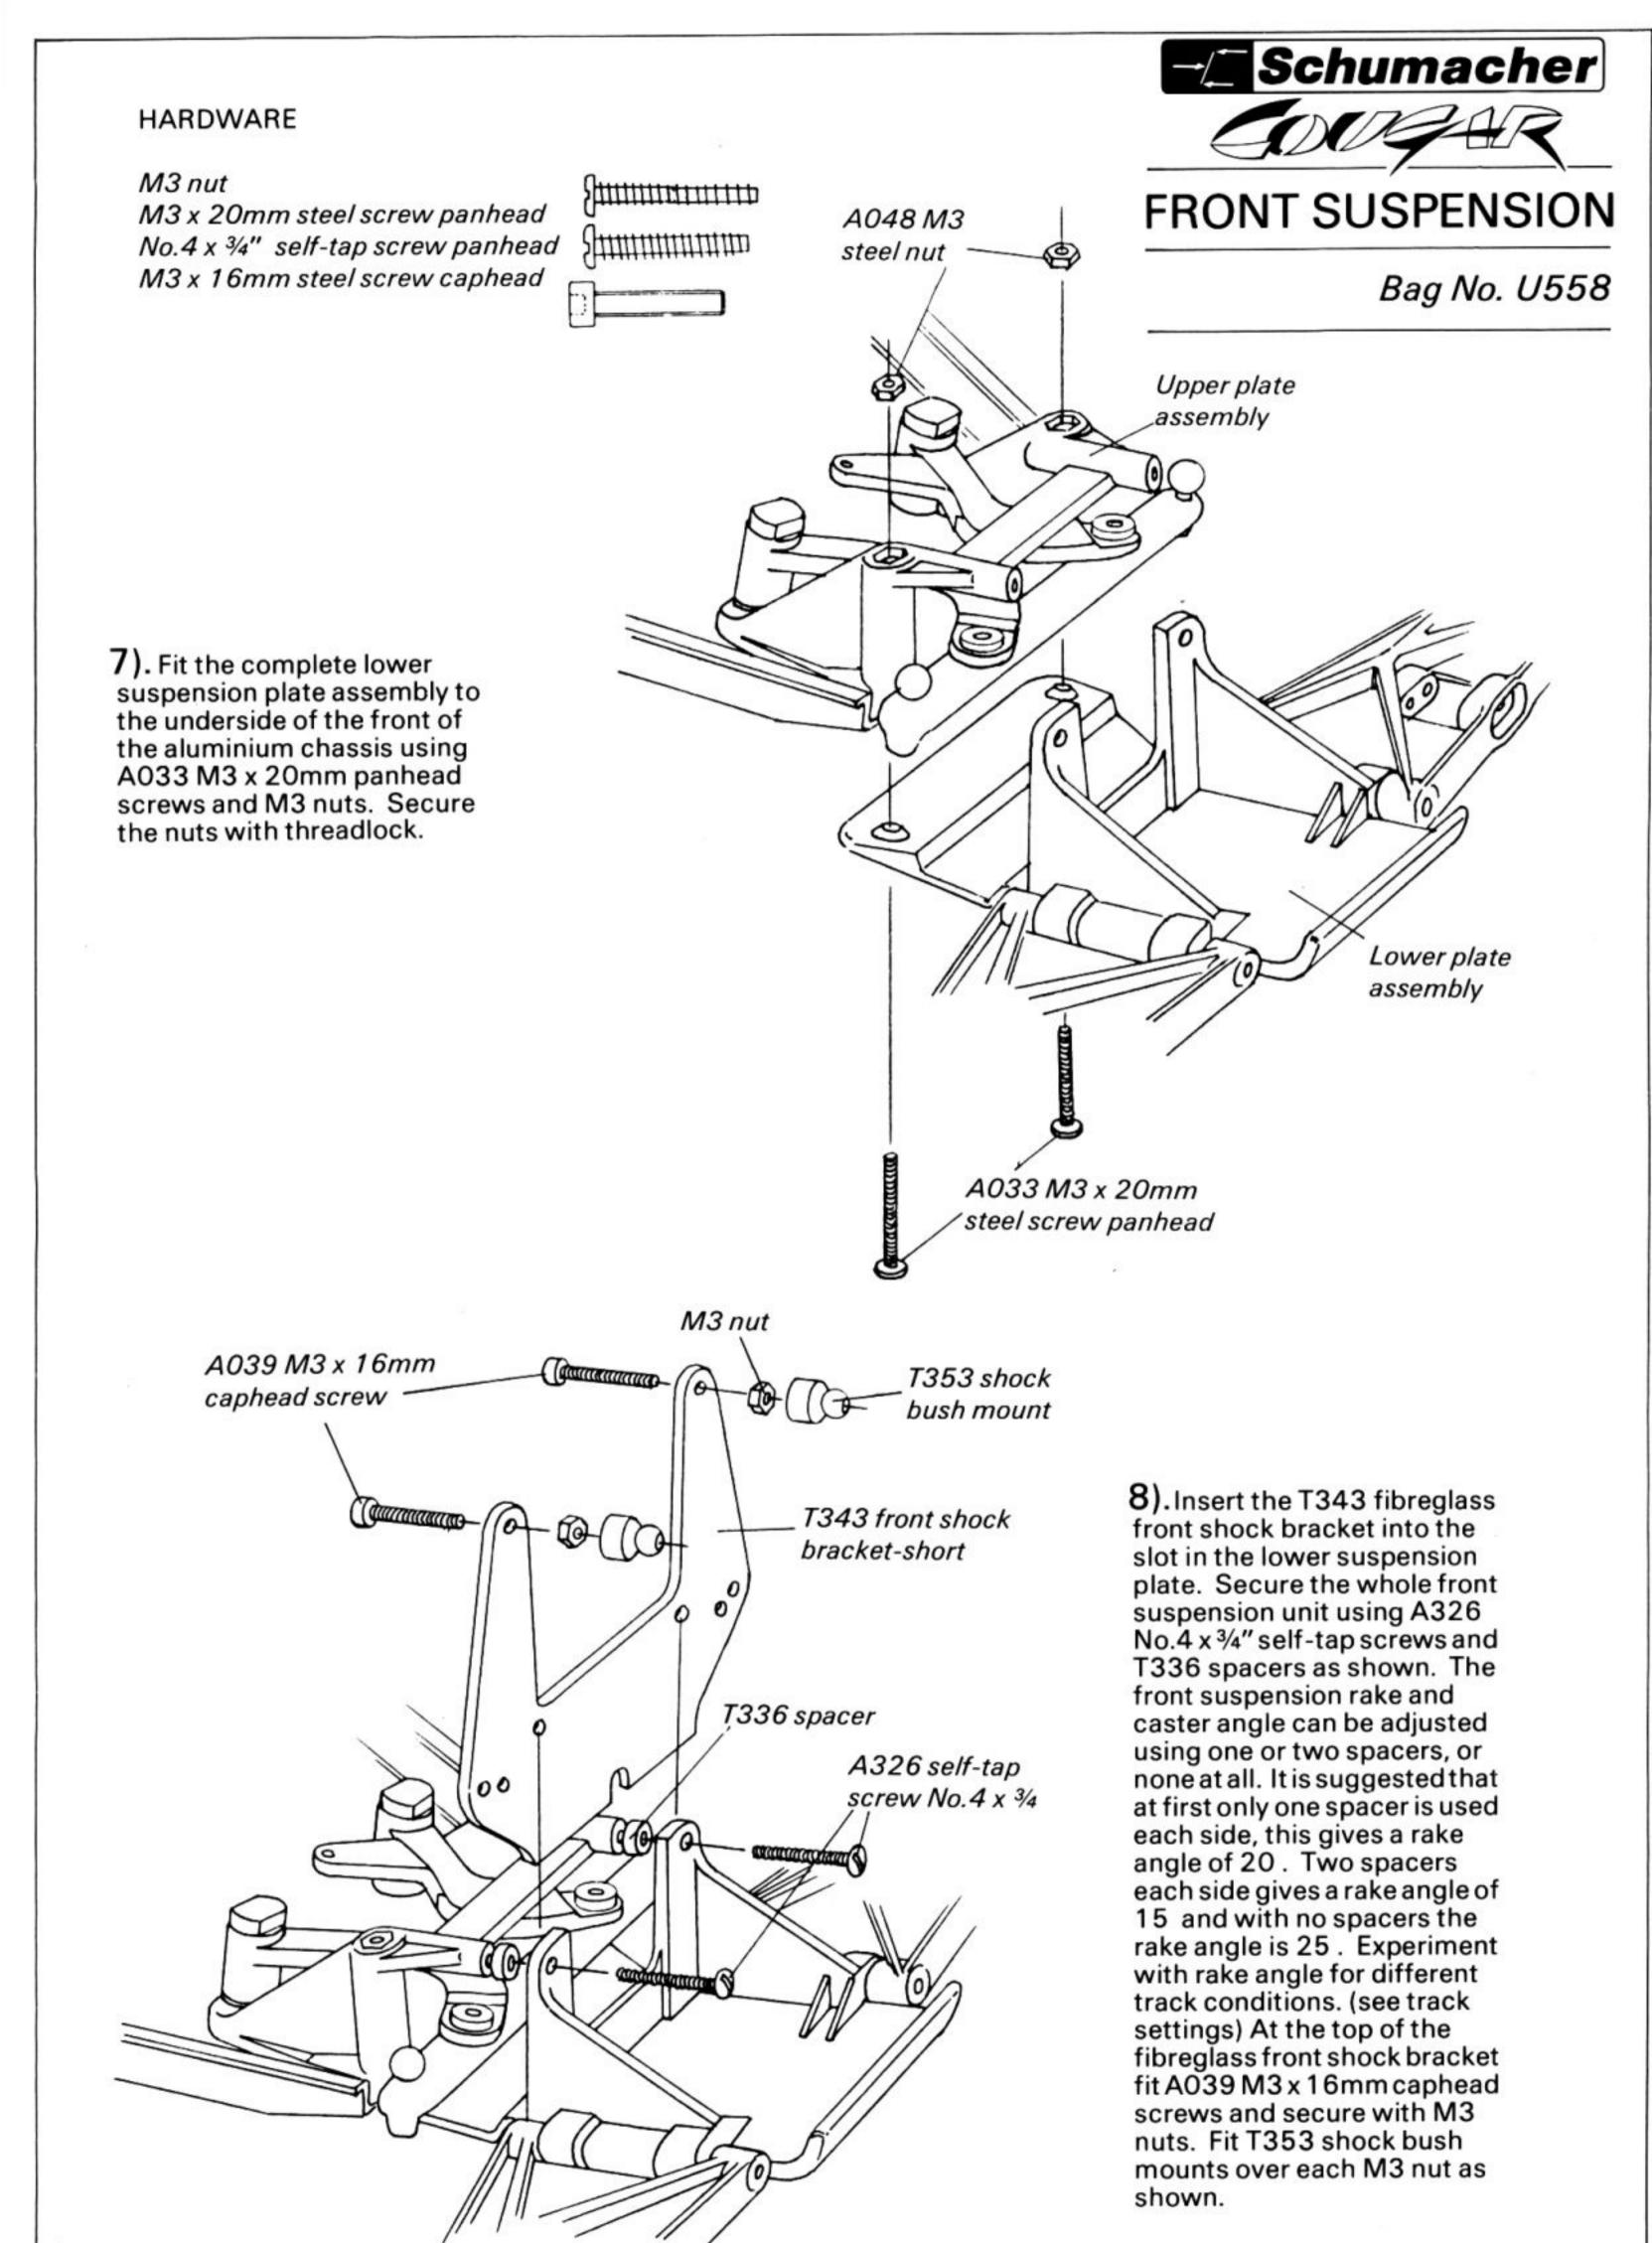


M3 nut Nylon washer 1.6mm M3 nyloc nut M3 x 12 caphead screws




Bag No. U558

Fit a T321 ball joint stud and nylon washer into the outer hole in the fibreglass bracket and secure with an M3 nut and threadlock as shown. Repeat for the opposite side. The ball joint stud should face towards the front of the car. Screw a ball joint stud into the outer hole of the righthand steering block. Repeat for the lefthand side. Make up the front suspension top links by screwing T320 ball sockets to each end of two A095 M3 x 45mm turnbuckles. These have a right and lefthand thread to aid adjustment when fitted on the car. Equalise thread engagement and make length approximately 55.5mm between hole centres. Fit the top links to the car by spring fitting over the ball joint studs as shown. Make up the steering trackrod links in the same way using M3 x 45mm turnbuckles. Fit the steering trackrod links to the car by spring fitting over the ball joint studs as shown. Make the length approximately 61mm between hole centres.

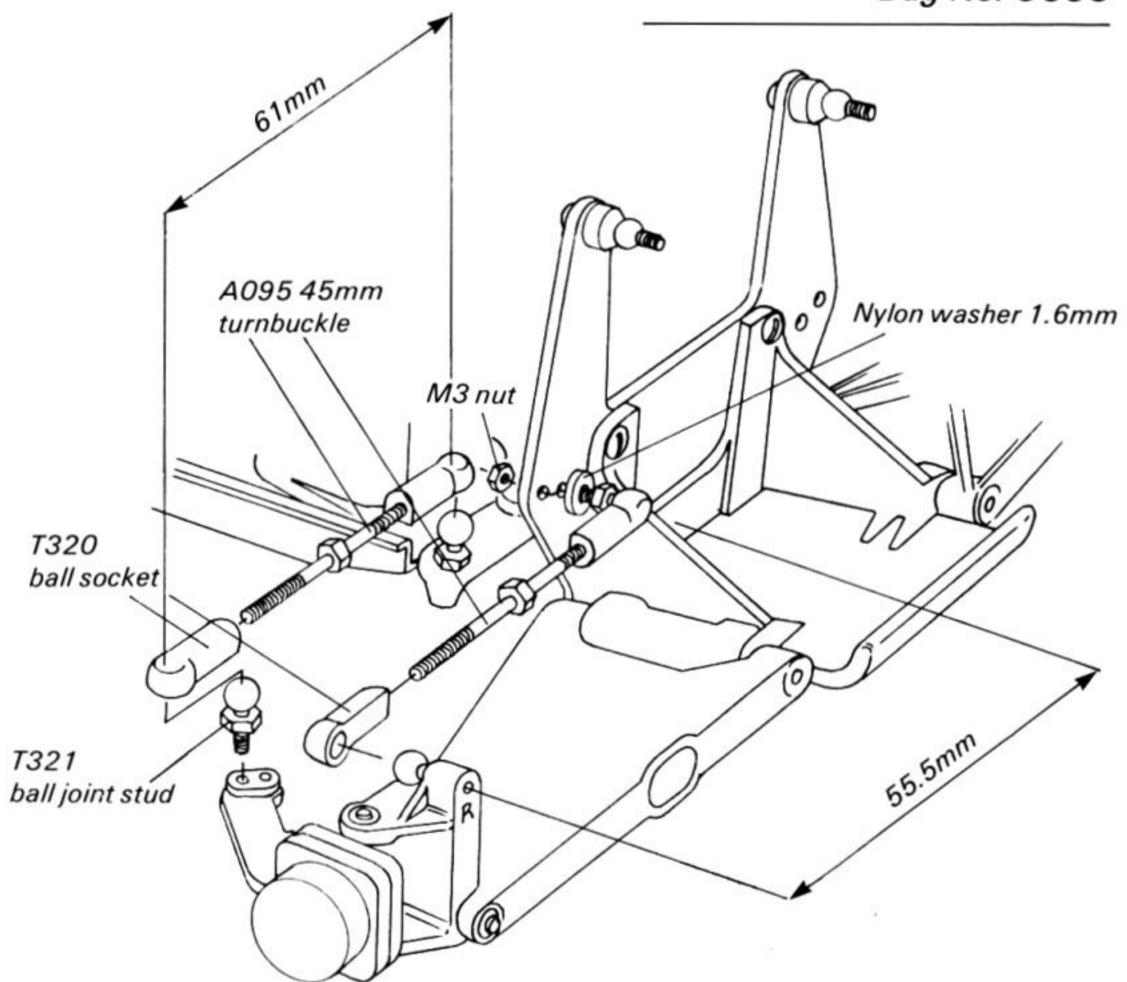

10). Fit the front shock absorbers to the car by fitting the top of the shock absorbers over the T353 shock bush mounts and secure with M3 nyloc nuts. Do not overtighten, shock absorber must have free movement over the full range of suspension travel. Insert

the rose joint at the base of the shock absorber into the slot in the front wishbone. Fix to the wishbone using an A039 M3 x 16mm caphead screw into the inboard of the two holes. (see main diagram - centre pages).

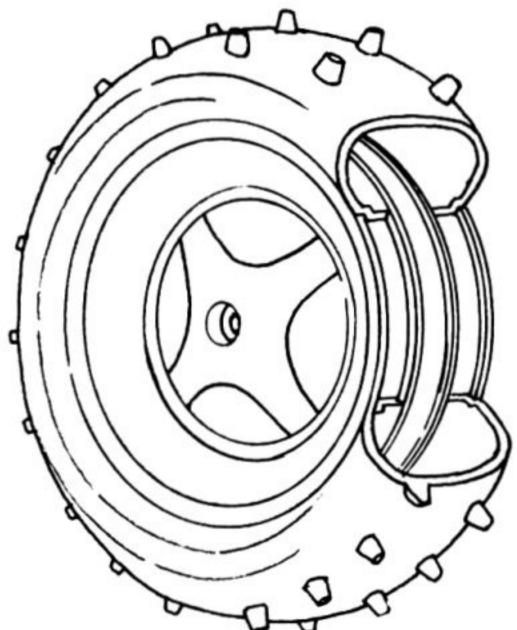

1 1). Fit tyres to wheels taking care fo ensure that the tyre bead properly seats in the grooves of the wheels. Make sure wheels do not have 'flash' at the joint line which could prevent tyre bead from sitting properly in position.

12). Fit front wheels by first assembling A038 M3 x 12 cap head screws into wheels. Then, with screw acting as a pilot, fit to hub carrier; push hard into place and feel engagement of dogs before tightening wheel retaining screw.

(See main drawing)




T115
servo-saver
assembly

SERVU


13). Select the servo saver fitting to suit your servo and fit the T115 servo saver spring over the T114 moulding as shown; twist the spring downwards into its correct position. The coils of the servo saver must tighten as the saver operates.

Fitting Nicads

14). Fit T254 nicad holder to chassis using No.4 x 3/8 countersunk head self-tap screws. Add retaining strap using No.4 x 3/8 pan head self-tap screws.

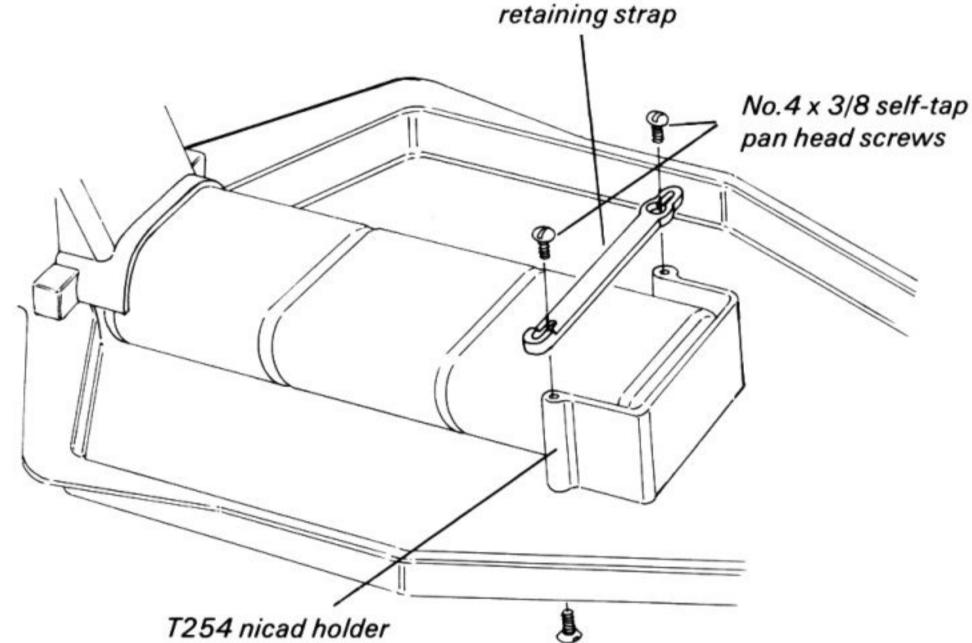

No.4 x 3/8 self-tap countersunk head screws

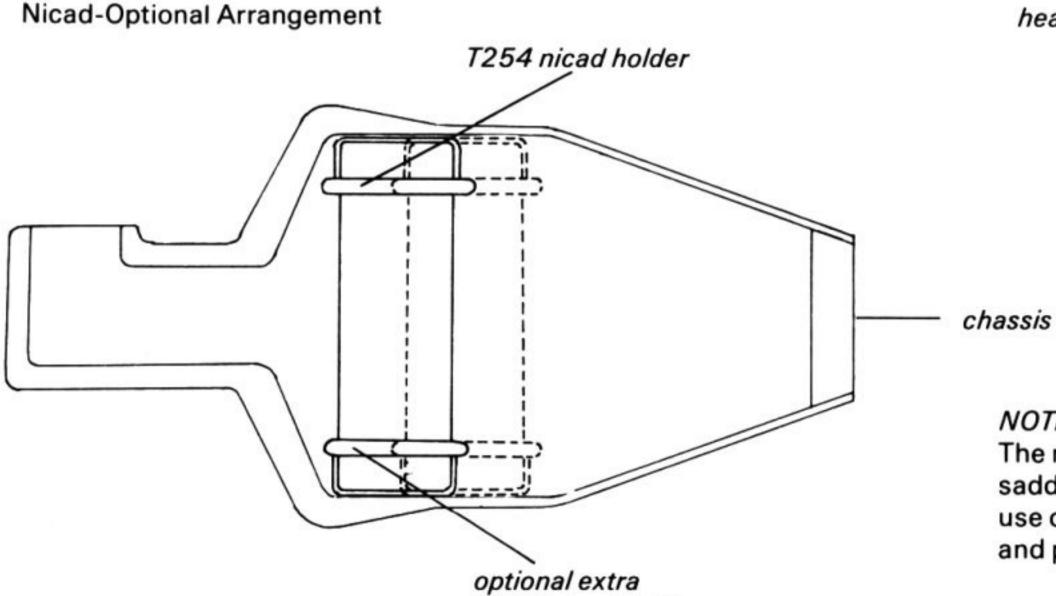


U254 nicad holder

NOTE: The nicads can be fitted in a saddlepack arrangement with use of our quick release straps and posts, available as U743Q. Self-tap screws No. 2 x 3/16 pan head
A220 Steel thrust washer
20mm Long M3 screw
A501 Nyloc nut



Bag No. U550

1). Fit the round T081 bearing housings using only two No.2 x 3/16 pan head self-tap screws in each housing for the time being. The other two screws will be fitted later when the drive belt is adjusted for correct tension. Note the angular position of the tags which should be the same on each side of the car. The position illustrated will give the slackest belt adjustment. Fit the square bearing housings using only the two No.2 x 3/16 pan head self-tap in each.

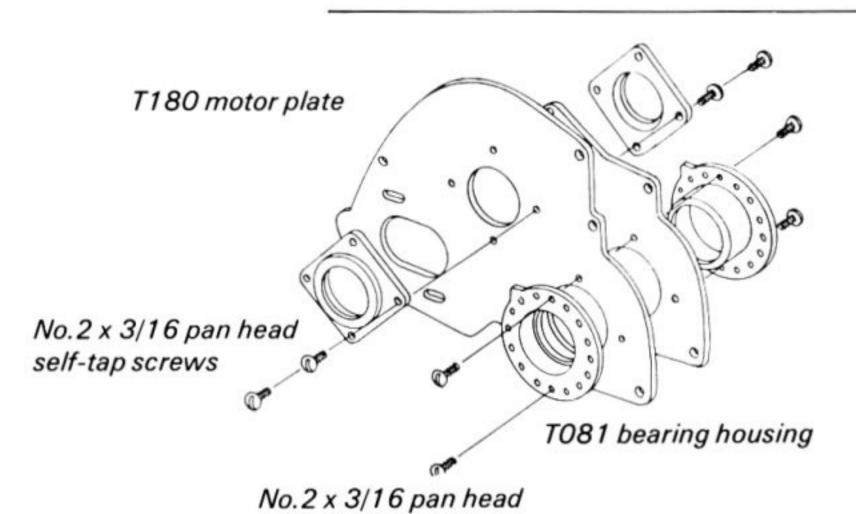

self-tap screws

T245 friction paper adhesive

2). Using epoxy or superglue fix the T245 friction paper to the A220 steel thrust washer with the smooth surface towards the steel washer. Make sure both washers are concentric and press between two flat surfaces whilst adhesive is curing.

3). Fit A051 nyloc nut into the hexagon recess 2 x T030 wheel hub and 1 x T031 rear hub. Nut is a tight fit and should be pulled into position using a 20mm long M3 screw, washer and nut as shown.

20mm long M3 screw
T030 hub
T031 hub
A051 nyloc nut

4). Assemble differential parts onto the T084 rear axle as shown and in the following order: T084 axle, A154 disc spring (2 off), A520 thrust race assembly, T031 rear hub, without nyloc nut, A539 bearing sleeve, A536 oilite bearing, (U724 optional ball races replace A539, A536) T118 washer carrier, A220 steel washer with friction paper towards washer carrier, T203

differential pulley

A539 bearing steeve

with 3mm diameter steel balls fitted into the fourteen holes and lightly lubricated with silicone grease, A220 steel washer(with friction paper towards washer carrier) T118 washer carrier, A539 bearing sleeve, A536 oilite bearing (U724 optional ballraces replace A539,A536) and finally, the T031 rear hub with nyloc nut fitted inside. Make sure the dogs

A520 thrust race assembly

TO31 rear hub

of the washer carriers and the hubs correctly engage and that the thrust washers correctly locate on the spigot of the washer carriers. Screw up the axle until clearance is removed and washers are gently clamped. Whilst holding both hubs, force the pulley to skid round a few times. Apply a little more tension such that pulleys can only be made to skid with some difficulty using finger pressure only.

A539 bearing sleeve A154 disc using sleeve Spring A154 disc using sleeve A154 disc using sleeve A154 disc using sleeve A154 disc using sleeve Spring A154 disc using sleeve A154 disc using sleeve A154 disc using sleeve Spring A154 disc using sleeve A154 disc using sleeve A154 disc using sleeve A154 disc using sleeve Spring A154 disc using sleeve A154 disc using slee

TO31 rear hub with nyloc nut

T203 differential pulley


T118 washer carrier

A536 oilite bearing

T084 rear axle


Differential action should now be free and smooth; (final adjustment of the differential will be made when the car is fully assembled.)

Self-tap screws No.2 x 3/8 pan head Self-tap screws No.4 x 3/8 pan head

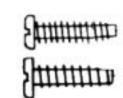





Bag No. U550

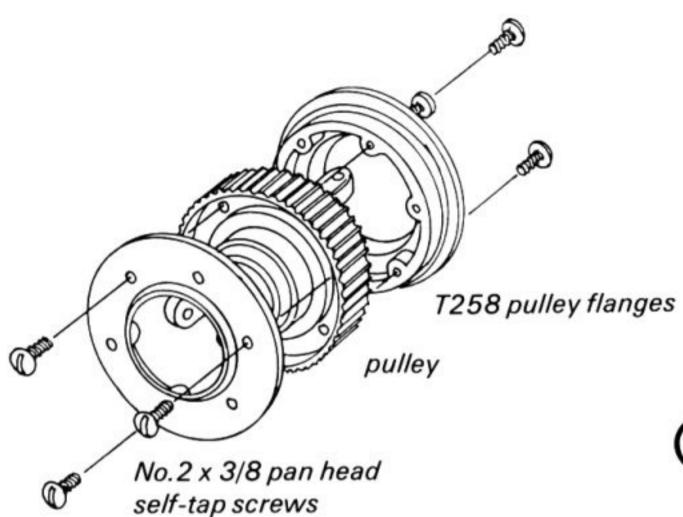



5). Fit T258 pulley flanges either side of the pulley and retain with No.2 x 3/8 pan head selftap screws.

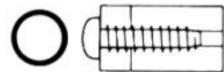

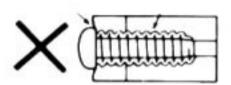

6). Refer to the illustration and fit the four T108 universal joint pivots into the four drive shafts T028 and T027. File the pips off the T131 fibreglass assembly tool before use. First time assembly is made easier by warming the moulded parts in hot water. Once the technique is aquired, joint assembly becomes a simple task.

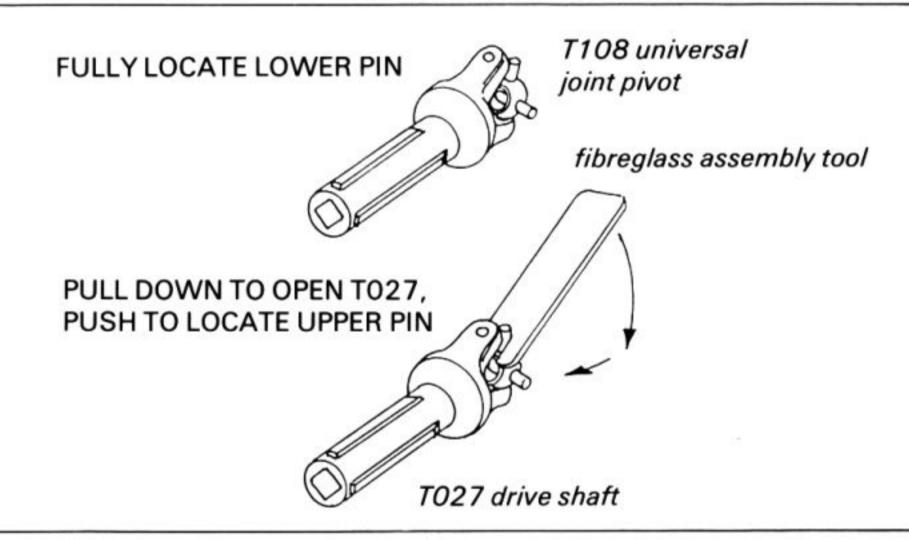

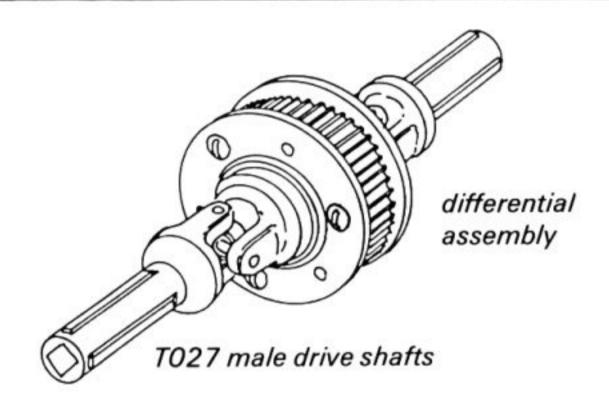


7). Fit the TO27 male drive shaft to the hubs on the differential assembly.

(as in 6 above.)

8). Fit the T180 motor plate to the T178 transmission housing using two No.4 x 3/8 pan head self-tap screws and two No.2 x 3/8 pan head self-tap screws each side.

Remove moulding sprue between transmission housing as shown.

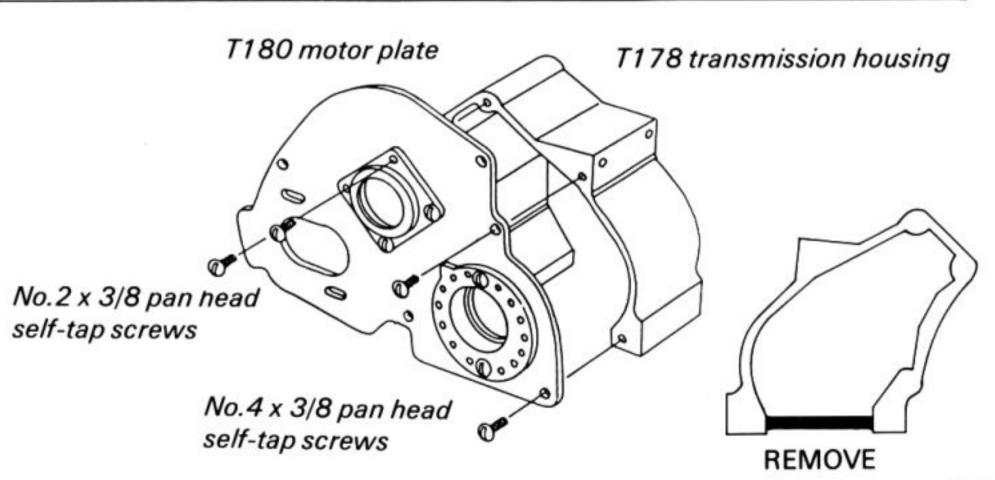







COUGAR RETAIL PRICE LIST - MARCH 1990

REQ	SPARES NO	DESCRIPTION	PRICE
	* U415T	COUGAR 2WD COMP ALL TERRAIN	
	U062E	Piston Rods - 16mm Stroke	
	U063F	Piston Rods - 32mm Stroke	
	U084A	Rear Axle	
	U119J	Aerial Tube	
	U122M	Velcro 50 x 20mm (pk of 4)	
	U132W	Spring 0.45 x 8 x 1.5 front (pr)	
	U133X	Spring 0.45 x 11 x 2.5 rear (pr)	
	U162A	Diaphragm Shock Absorber (pk 4)	
15	U178P	Transmission Housing 2WD	
	U195G	Hi Torque Drive Belt 72 x 8mm	
	U199K	Rear Hub Carriers (pr)	
	U202N	Pivot Block Rear Wishbone (Pk 4)	
	U215A	Gear Cover - 2WD	
	U221D	Chassis Pan - 2WD - Polished Finish	
	U224G	Front Wheel - Spoked White (pr)	
	U225H	Rear Wheel - Spoked White (pr)	
	U226I	Bush Layshaft Bearing	
	U227J	Layshaft	
	U229L	95T Gear 48 D.P.	
	U230M	92T Gear 48 D.P.	
	U231N	89T Gear 48 D.P.	
	U232O	86T Geur 48 D.P.	
	U233P	19T Pinion 48 D.P.	
	U234Q	22T Pinion 48 D.P.	
	U235R	25T Pinion 48 D.P.	
	-U236S	28T Pinion 48 D.P.	
	U237T	Bulkhead - 2WD	
	U254K	Nicad Holder - Stick Pack	
	U255L	Motor Guard - 2WD	
	U260Q	Shock & Wing Mount - 2WD	
	* U268C	Rear Wishbone - Med W/B	
	* U343Z	Shock Mount F/G - COUGAR	
	* U415T	COUGAR 2WD Comp All Terrain	1
	* U418W	COUGAR - Ballraced & Assembled	
	U517R	Bearing Housings Moulding	
	U550F	Transmission Set - 2WD	
	U552H	Rear Suspension Set - 2WD	
	U555K	Shock Absorbers (Set 4) - 2WD	
	* U558N	Front Suspension - COUGAR	
	* U583M		-
	* U584N	Body & Wing - COUGAR Instruction Book Set - COUGAR	
	U613J	Spring Stop & Spacer Moulding Shock Absorber Spale (4 sets)	
	U614K	Shock Absorber Seals (4 sets)	
	U627X	Servo Saver Assembly	
	U631B	Universal Joints (8pcs)	

REQ	SPARES NO	DESCRIPTION	PRICE
	U637H	Shock Absorber Pistons (set 4)	
	U700Z	Transmission Fixings Bag - 2WD	
	U701A	Pulley Set - (51T & 21T) - 2WD	
	U702B	Diff. Repair Kit	
	U703C	Rear Suspension Small Parts - 2WD	
	U704D	Drive Shaft Set - 2WD	
	U712L	Wing Mount Kit	
	U717Q	Adjustable Servo Link (2 sets)	
	U720T	Oilite Bearings - Transmission - 2WD	
	U721U	Oilite Bearings - Wheel (pr)	
	U722V	O Ring 1/8" - (pk 10)	
	U723W	Transmission Side Plates - Black	
	U724X	Ball Bearings 8 X 16 X 5 (PK 4)	
	U727A	E Clip 1/8" (pk 10)	
	U728B	M3 Rose Joints (pk 4)	
	U729C	Chrome Steel Balls 3mm Dia (pk 30)	
	U730D	Thrust Race 1/8" x 5/16"	
	U731E	Self Tap Screws - Spares Pack	
	U732F	M3 Fasterings - Spares Pack	
	U733G	O Ring 9mm - Wing Mount (pk 10)	
	* U748V	Front Susp. Pivot Set - COUGAR	
	★ U749W	Steering Pivot Set - COUGAR	
	★ U750X	Ball Studs & Sockets (8 prs)	
	U760H	Turnbuckle Adj. (2pr)	
	U761I	Disc Spring 1/8" (pk 10)	
	* U774V	Wishbones & Hub Mouldings - COUGAR	
	★ U775W	Front Plate & Steering Levers - COUGAR	
	* U776X	Top Bkt. Yokes, Ctr Track Rod - COUGAR	
	* U777X	Decal Sheet - COUGAR (Pk 2)	
	* U779A	Servo Tape - 1 Metre Roll	
	ACCESS		-
	* U200L	Rear Wishbones - Long W/B	
	* U344A	Long Front Shock Mount - COUGAR	
	U633D	Front Shocks Assembled (pr)	
	U634E	Rear Shocks Assembled (pr)	
	U737K	Lightweight St St Bearings = A533 (pr)	
	U739M	Rear Anti-roll Bar - 2WD	
	U743Q	Q.C. Saddle Pack Tray & Strap (pr)	
	U745S	Super Diff - 2WD	
	U7670	Front Spring Tuning Set - 4 rates	
	U768P	Rear Spring Tuning Set - 4 rates	
	U770R	Slipper Clutch 2 & 4 WD	
	CAUGUS CAMPAGNA A		
	G3141	Baseball cap - one size	
	G318M	T-Shirt New CAT Logo	
	G319N	Sports Shirt - New CAT Logo	
	G3200	Sweat Shirt - New CAT Logo	. I.

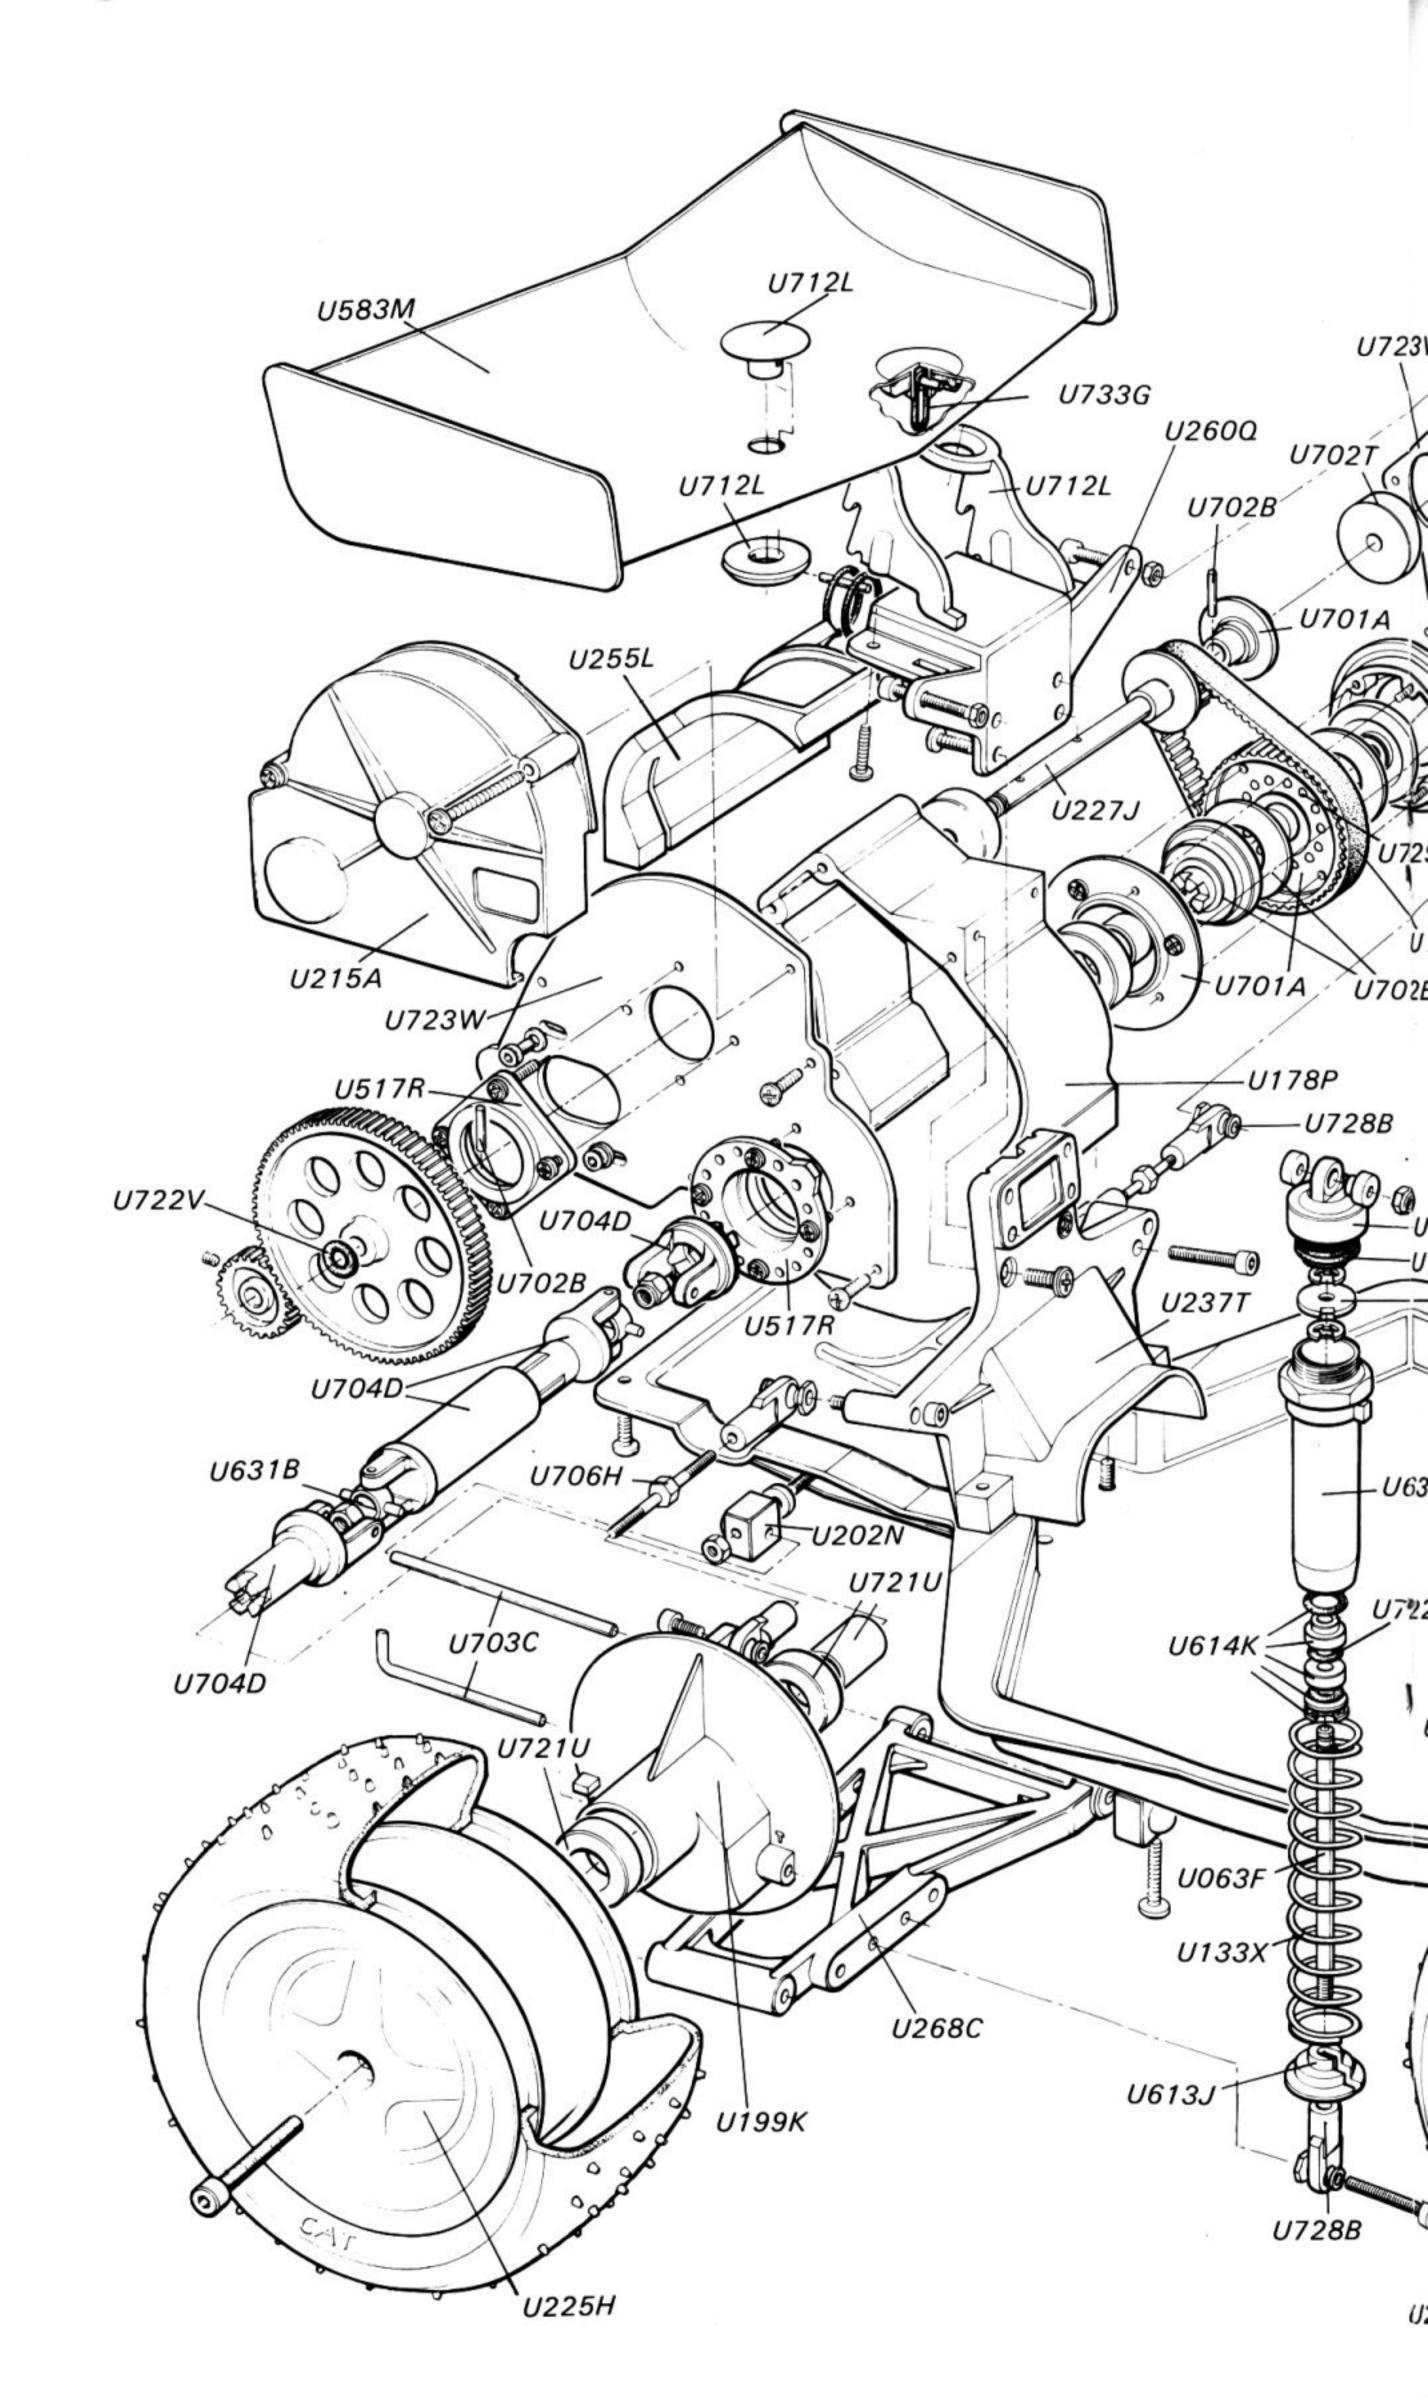

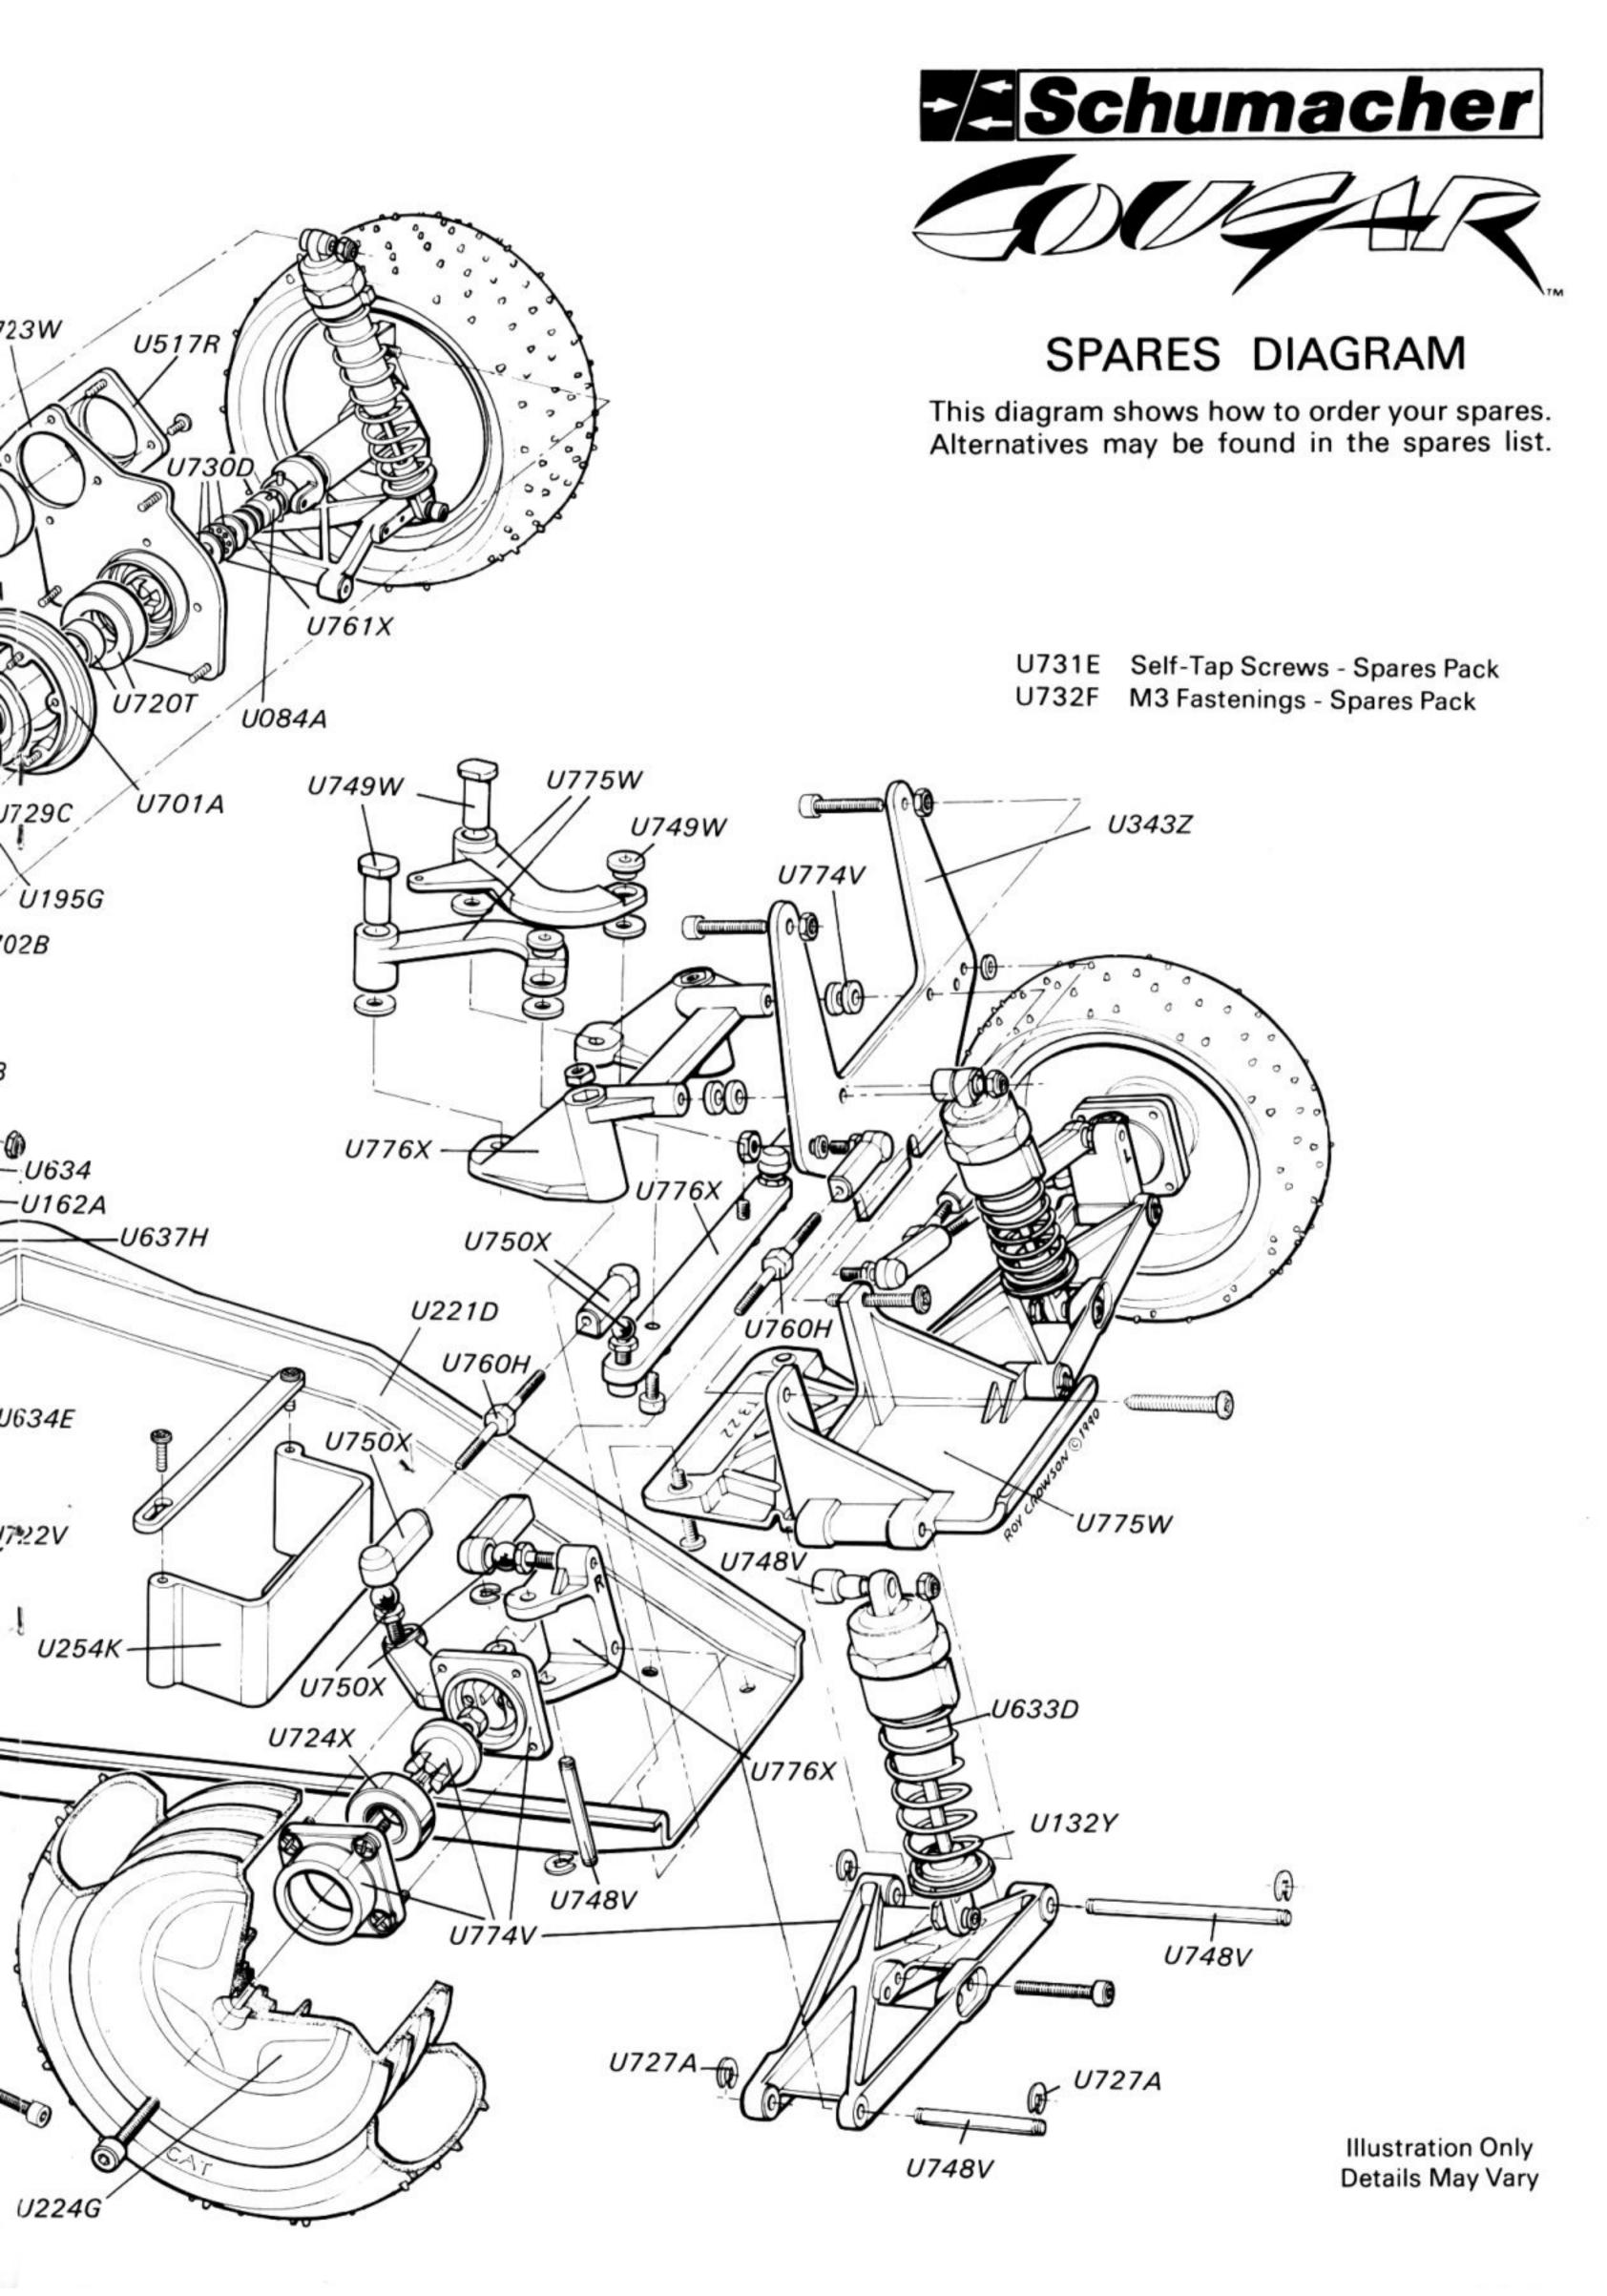

Schumacher

NORT

OTY IN BAG

SPARES BAG NO.

A028

2

U732F

A028

N

U703C

A010

N

U703C

U732F

A023

N

U749W

A010

COUGAR SPARES LIST

PART

T084

T084



A326	A326	A326	A323	A323	A323	A323	A323	A304	A304	A304	A301	A301	A230	A230	A225	A225	A225	A225	A220	A220	A220	A209	A209	A208	A206	A206	A206	A190	A190	A185	A185	A181	A181	A181	A180	A154	A143	A141	A131	NO
2	4	2	2	8	8	2	12	6	10	12	12	12	2	4	4	2	4	4	2	2	2	4	4	2	4	2	3	10	2	4	4	10	8	8	1	2	1	1	4	IN BAG
U700Z	U731E	U703C	U254K	U700Z	U703C	U712L	U731E	U701A	U700Z	U731E	U700Z	U731E	U555K	U614K	U749W	U700Z	U732F	U732F	U770R	U745S	U702B	U555K	U614K	U555K	U555K	U633D	U703C	U733G	U712L	U555K	U614K	U722V	U555K	U614K	U700Z	U700Z	U703C	U700Z	U555K	SPARES BAG NO

A103

10

U727A

A103

12

U748V

A103

4

U633D

A103

A095

4 0

U634E

T180

T180

1202

T202

T199

1199

T197

T196

1195

T195

1179

1179

T178

T178

T162

T162

T162

T159

T159

T158

T158

T133

T133

T132

T132

U760H

A093

2

U703C

A051

N

U748V

U745S

A051

00

U732F

A051

w

U700Z

A051

2

U634E

U555K

U748V

A051

A048

NN

A048

4

U732F U703C

A048

ω

A048

N

U634E

A048

N

U633D

A048

N

U555K

A051

A103 A103

6

U705E

A131 A103

4

U614K

12

U555K

6

U614K

A038

N

U555K

U700Z

A035

A035

N

U732F

A032

N

U749W

A030

U703C

U732F

A030

A038

4

U633D

A039

N

U732F

A039

4

U555K

A040

N

U700Z

A040

4

U732F

A039

N

U748V

A038

N

U634E

T083	T082	T081	1063	T063	T063	1062	T062	1062	T061	T060	T059	T031	T030	T028	1027	S604	S604	S603	G305	A538	A536	A536	A536	A533	A520	A520	A520	A500	A500	A500	A424	A417	A412	A407	A405	A401	A401	A333	A333	NO
-	1	2	2	2	2	2	2	2	2	2	4	2	2	2	2	-	-	1	1	2	2	4	2	4	-	-	1	15	30	15	4	2	2	2	з	-	1	4	8	IN BAG
U517R	U517R	U517R	U634E	U555K	U062E	U633D	U555K	U062E	U555K	U555K	U555K	U704D	U704D	U704D	U704D	U584N	U583M	U7777Y	U779A	U721U	U550F	U721V	U720T	U724X	U745S	U730D	U702B	U745S	U729C	U702B	U717Q	U703C	U703C	U712L	U702B	U702B	U227J	U700Z	U731E	SPARES BAG NO.

T122

T119

T131

T117

T118

T117

T108

1097

1096

T095

T094

1093


1092

T090

U552H	U202	U552H	U199K	U701A	U701A	U550F	U195G	U550F	U723W	U550F	U723W	U550F	U178P	U164K	U555X	U162A	U555X	U614K	U614K	U555X	U555X	U133X	U555K	U132U	U550F	U122M	UPI	U702B	U555K	U633D	U631B	U637H	U637H	U613J	U613J	U613J	U613J	U613J	U550F	U084A
T334	1332	1330	1328	1323	1322	T321	T320	1268	1263	1262	1261	T260	T260	T258	T255	T255	T254	T252	T243	T243	T242	T239	T239	1239	T239	T238	1238	1238	1238	T238	1237	1237	1234	1234	1229	T229	T228	T226	T205	1203
+	+		T328 2	T323 1	T322 1	T321 8	T320 1	T268 2	T263 2	T262 2	1261 2	T260 1	T260 1	T258 2	T255 1	T255 1	T254 1	T252 1	T243 2	T243 2	T242 2	T239 4	T239 4	T239 4	T239 4	T238 4	T238 4	T238 4	T238 2	T238 2	1237 1	1237 1	T234 1	T234 1	T229 1	T229 1	T228 2	T226 4	T205 2	T203 1


1776	1776	1775	1775	1774	1774	1749	T748	1735	1712	T709	1707	T704	1703	T702	T701	T701	1700	T637	1637	1637	T614	T613	T613	T613	T558	T555	1552	1550	T517	1517	1353	1343	1343	T342	T341	T340	1339	T338	T336	1335	N
-	-	-	-	2	1	1	-	-	-	-	1	1	1	-	1	-	-	-	-	1	1	1	1	1	1	-	-	1	1	-	2	1	1	2	_	-	2	2	4	_	IN BAG
11776X	U558N	U775W	U558N	U774V	U558N	U558N	U558N	U712L	U552H	U558N	U558N	U550F	U552H	U550F	U550F	U701A	U550F	U555K	U634E	U637H	U555K	U634E	U633D	U613J	U558N	U555K	U552H	U550F	U517R	U550F	U748V	U343Z	U558N	U749W	U775W	U775W	U748V	U774V	U774V	U776X	BAG NO.

Self tap screw No.2 x 3/8 pan head Stilling
Self tap screw No.4 x 3/8 pan head

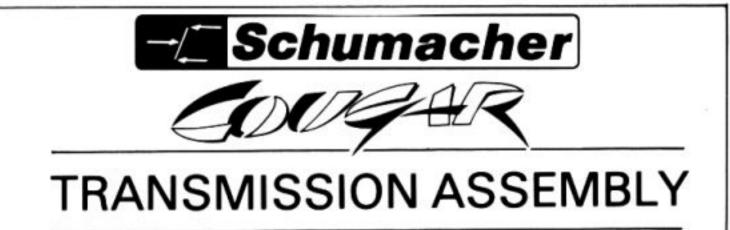

Bag No. U550


9). Fit A537 oilite bearings into the square bearing housings (optional U724 ballraces with T226 bushes replace A537. T226 not used with oilite bearing)

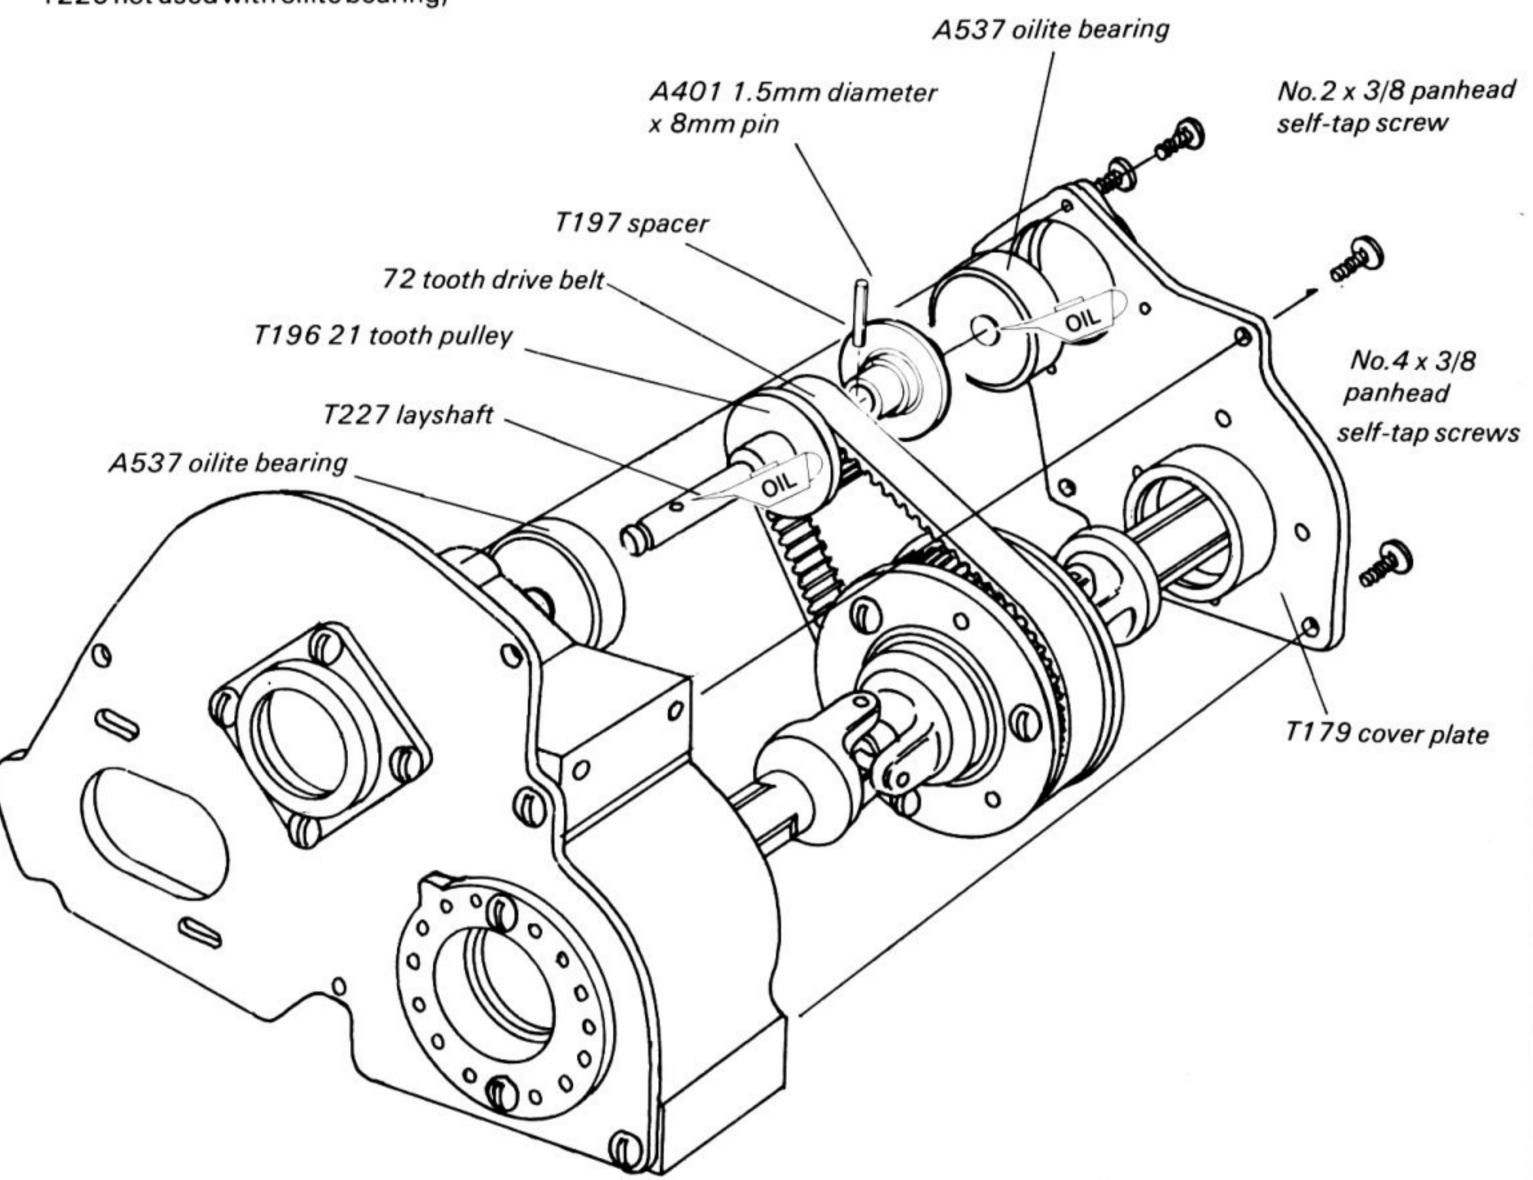

10). Assemble T227 lay shaft, A4011.5mm diameter x 8mm pin, T196 21 tooth pulley and T197 spacer.

- 11). Fit 72 tooth drive belt around layshaft and differential assemblies and slide into postion inside transmission housing. Make sure that the slotted head of the T084 rear axle is on the cover plate side. This will allow easier adjustment of the differential when the car is fully assembled.
- 12). Fit cover plate using No.4 x 3/8 and No.2 x 3/8 pan head self-tap screws. Transmission assembly should now spin freely.


No.2 x 3/16 pan head self-tap screws No4 x 3/8 pan head self-tap screw

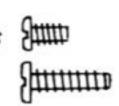



Bag No. U550

13). Fit T229 drive gear, A405 2mm diameter x 8mm pin and retain with A180 1/8 x 1/16 'O' ring.

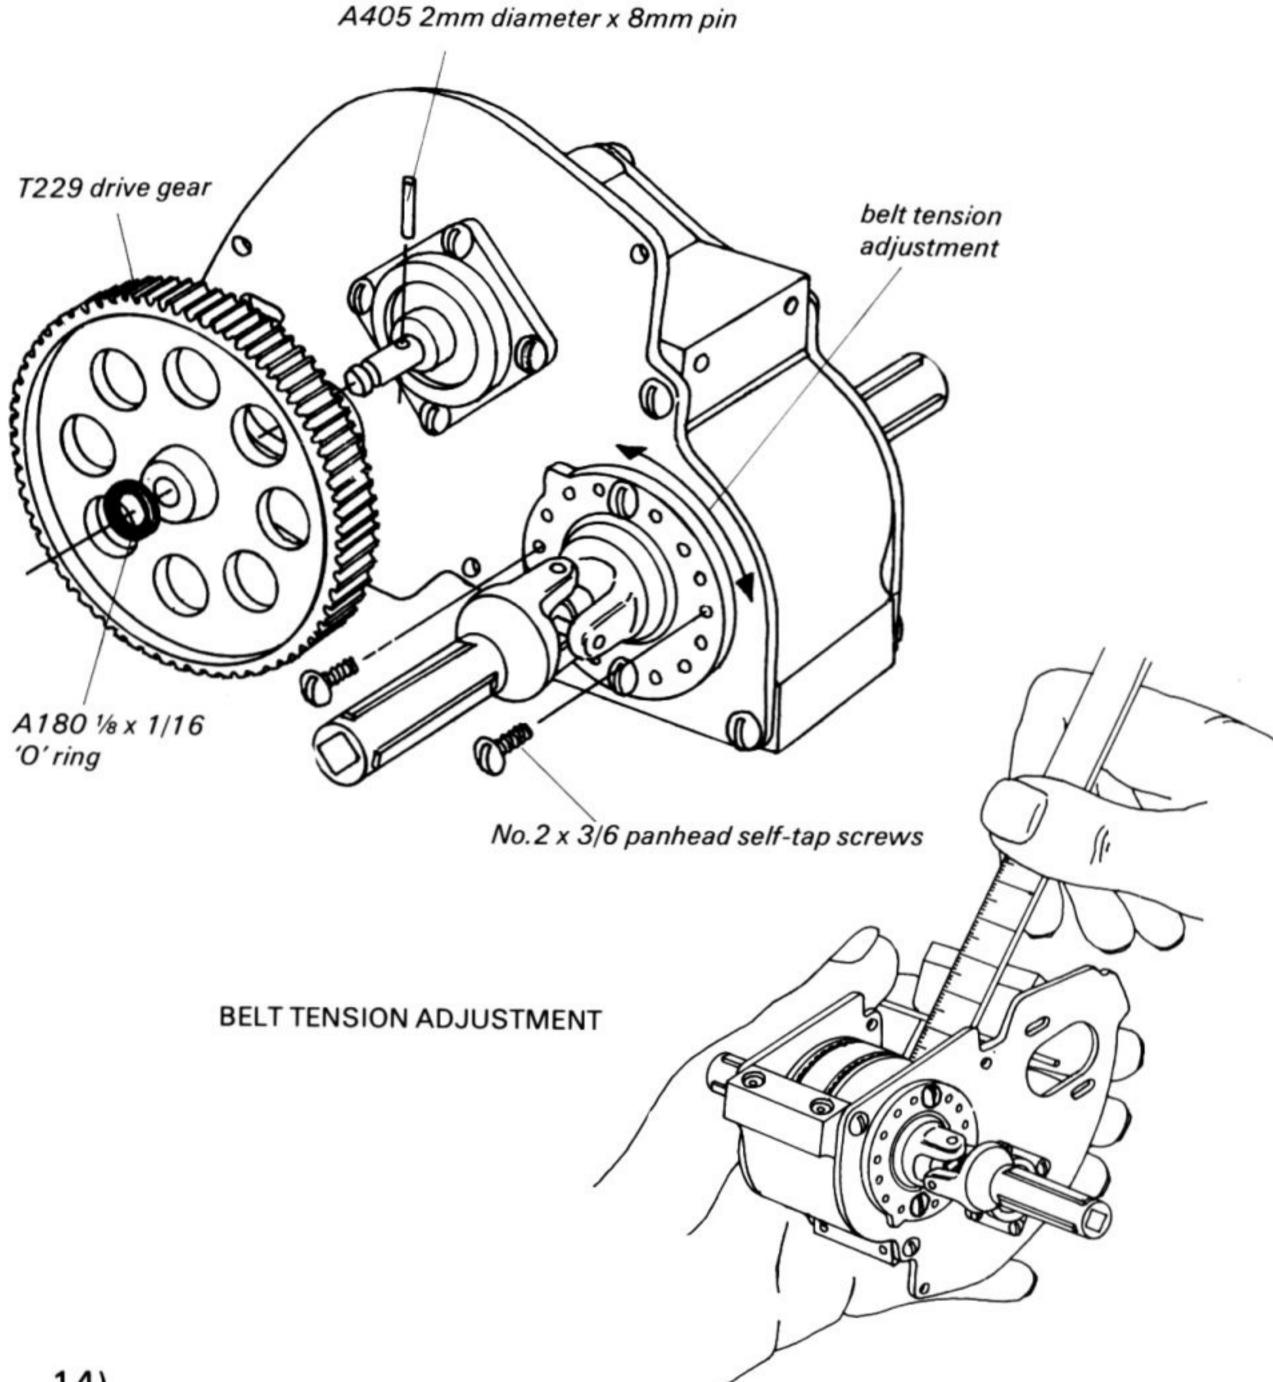

14).

Check belt tension by flexing rear part of transmission housing outwards as shown. Gently press on the belt midway between the pulleys, there should be 1-2mm of deflection. If there is too much remove the screws retaining the T081 eccentric bearing housings and rotate clockwise on the right hand side and anti-clockwise on the left hand side to increase the

tension. At least two fully tightened screws must be fitted to each bearing housing whilst checking belt tension. Both bearing housings should be in the same position and then all four screws should be fitted. Re-check the belt tension after all screws are fully tightened. Finally bend transmission housing back to normal position and fit the two remaining No.4 x 3/8 panhead screws.

A040 M3 x 20mm Cap head screw




TRANSMISSION ASSEMBLY

Bag No. U550

15). Fit the TO28 female drive shafts to the T030 wheel hubs and assemble the A538 bearing sleeves(optional U724 ballraces replace A538 & A536 oilite bearing). Sleeves may be tight on hubs, if necessary scrape off moulded ribs on hubs to ease assembly.

16). Press A536 oilite bearings (optional U724 ballraces replace A538 & A536 oilite bearing) into each end of the rear hub. carriers making sure that they are both seated against the bearing abutment in the bore.

17). Apply a little light oil to the bearing sleeves; assemble into the hub carriers and fit the rear wheels using A040 M3 x 20 cap head screw. Hold the wheel hub whilst pushing the wheel into place in order to feel the engagement of the drive dogs before tightening the wheel retaining screw. Wheel must now spin freely; if not, recheck that the home and are correctly lined up. If ballraces are used do not over tighten wheel screws.

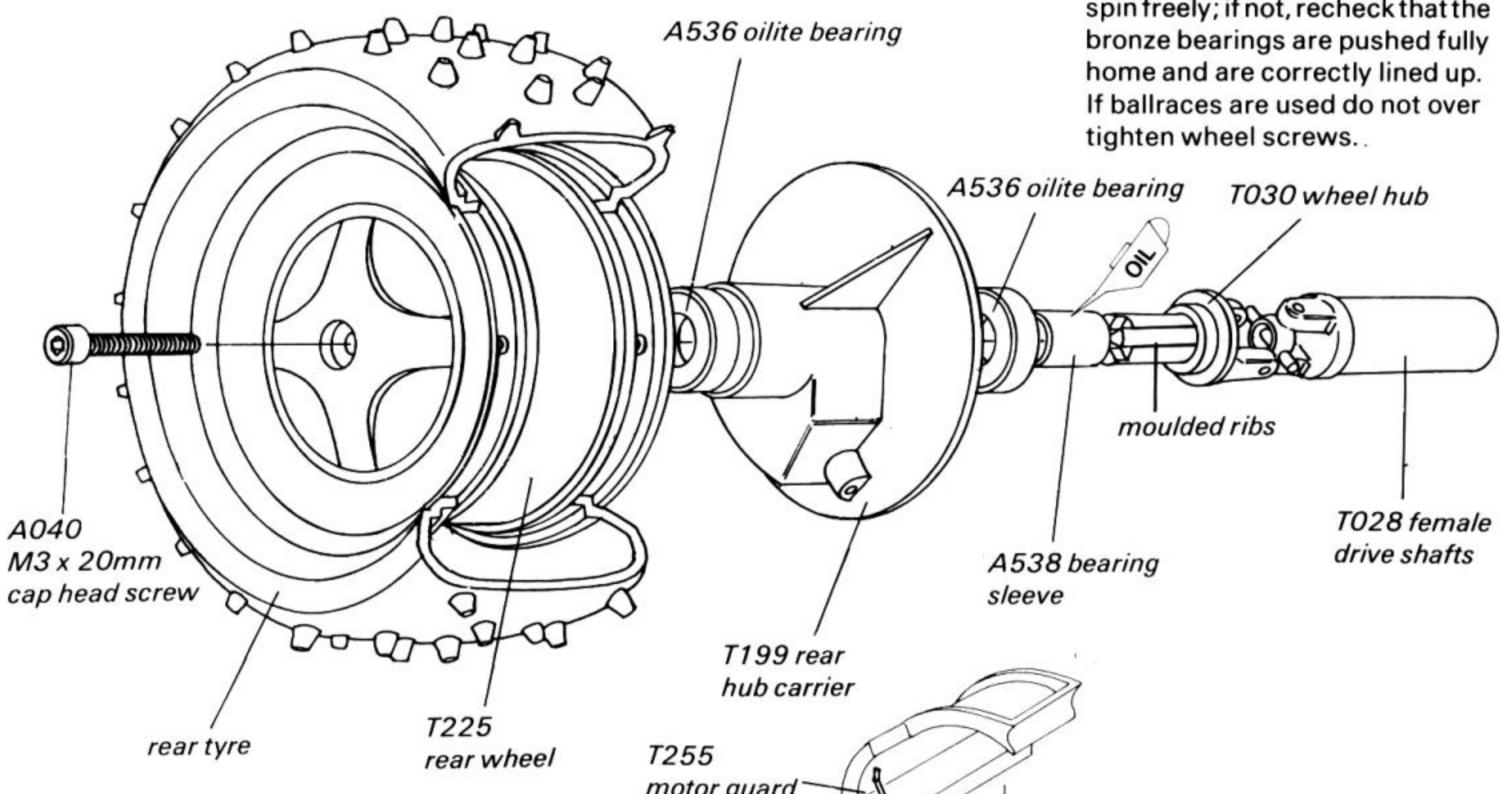


18). Fit motor using M3 x 6 cap head screws & washers and fit T234 pinion ensuring the grub screw clamps against the flat on the motor spindle. Make sure the pinion and gear are in line. Set motor position so that gears fully mesh but do not bind, check by rotating gears several times. Fit T215 gear cover using

No.4 x 3/4 self-tap screws.


Fit transmission assembly to chassis using No.4 x 3/8 countersunk head self-tap screws in the chassis and No.4 x 3/8 pan head self-tap screws in the bulkhead. (see main exploded diagram).

Finally fit T255 motor guard using No.4 x 3/8 panhead selftap screws making sure that motor plate engages in the slot.

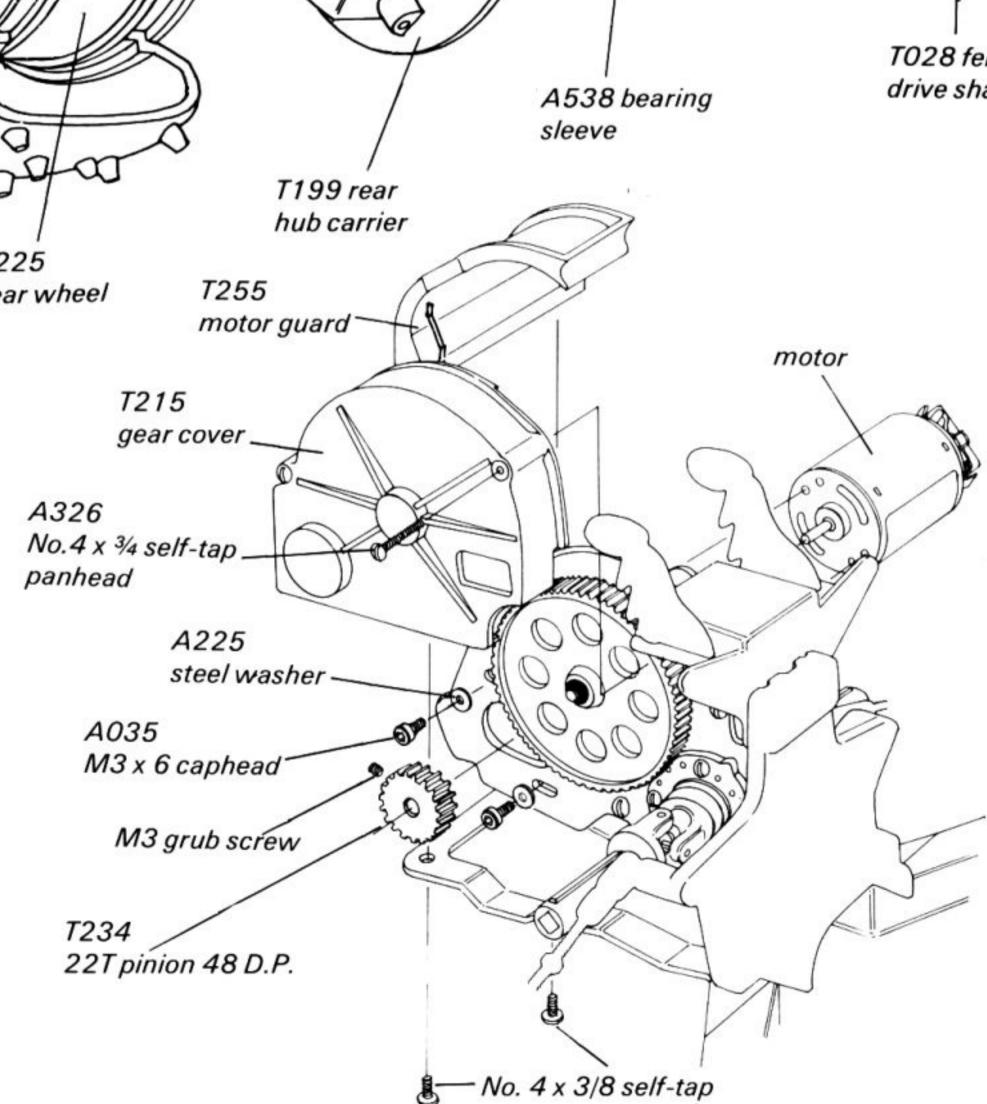




BODY & WING (cut away shaded areas)

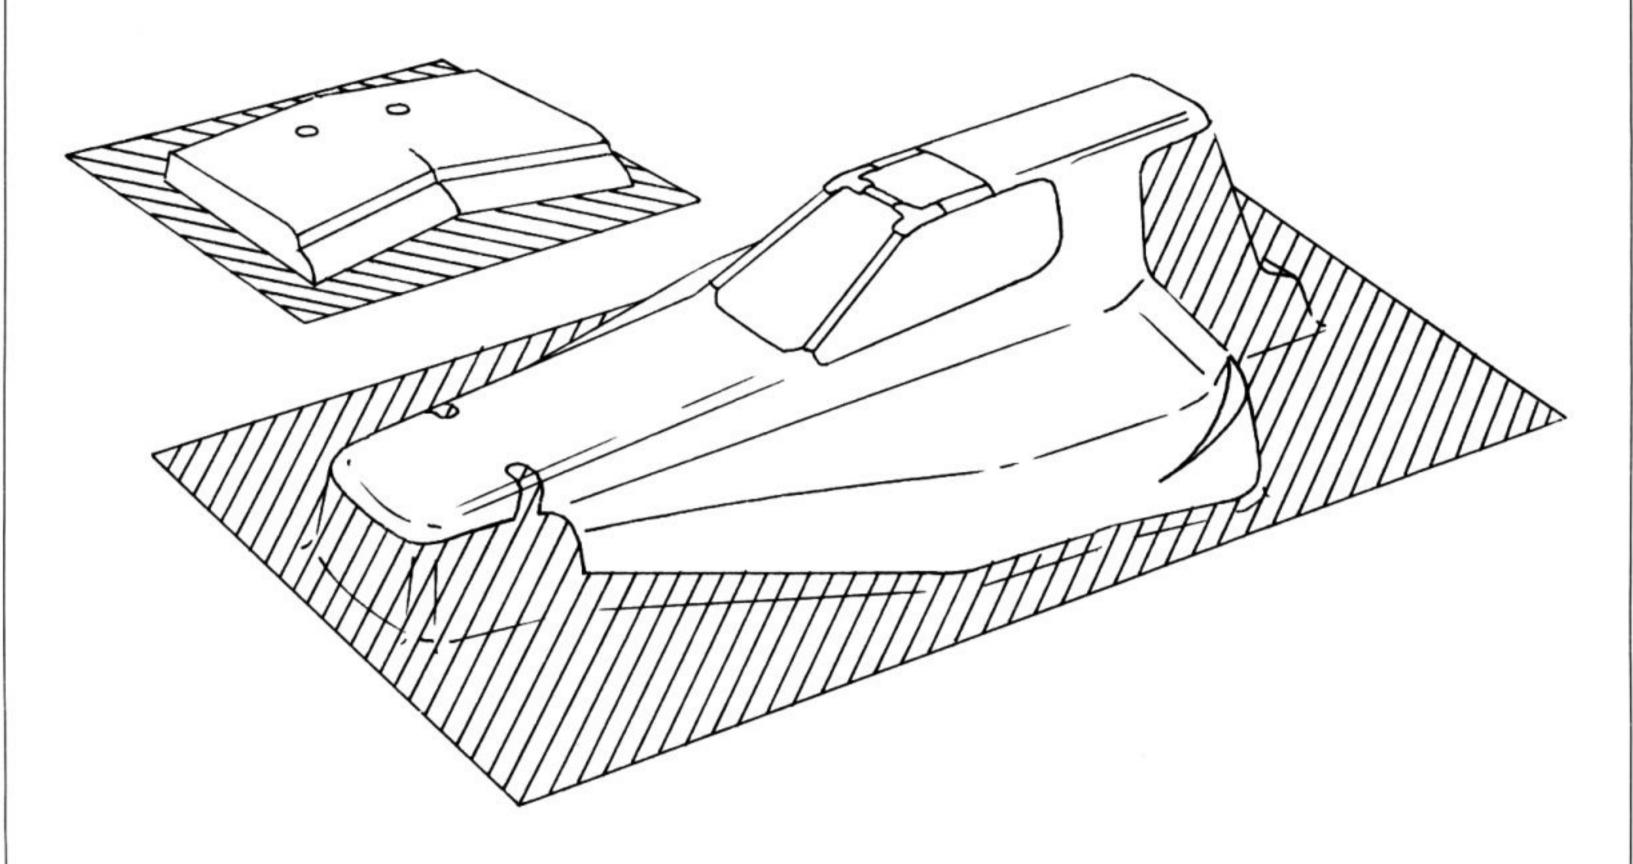

PAINTING

First, wash the body to remove any oil or dirt. Rinse thoroughly. Paint the inside of the body & wing. You can obtain a colour scheme by masking a portion with tape then removing the tape and painting. Apply the lightest colour last, apply decals from the sheet supplied to finish your bodyshell.

WINDOW MASKS FOR PAINTING BODYSHELL

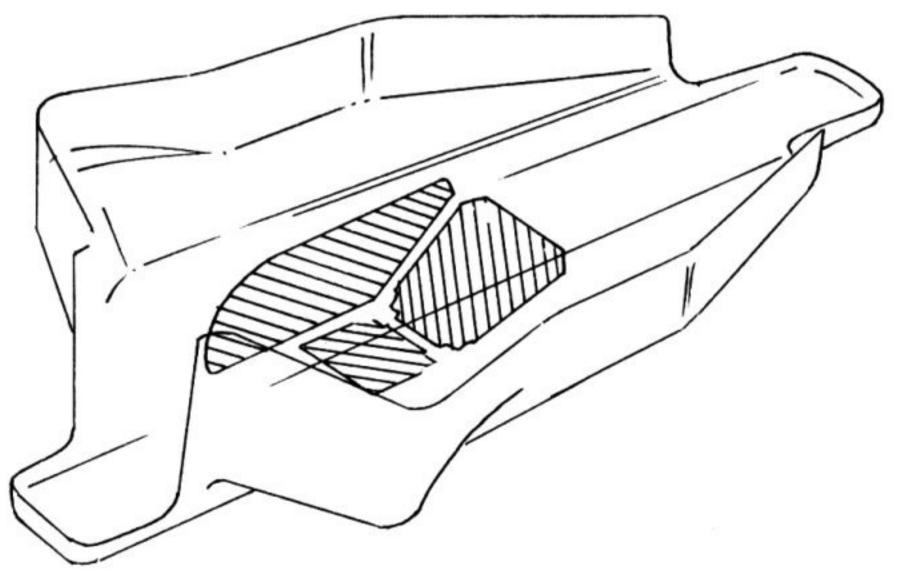


apply S604 window masks as shown




lexan paint



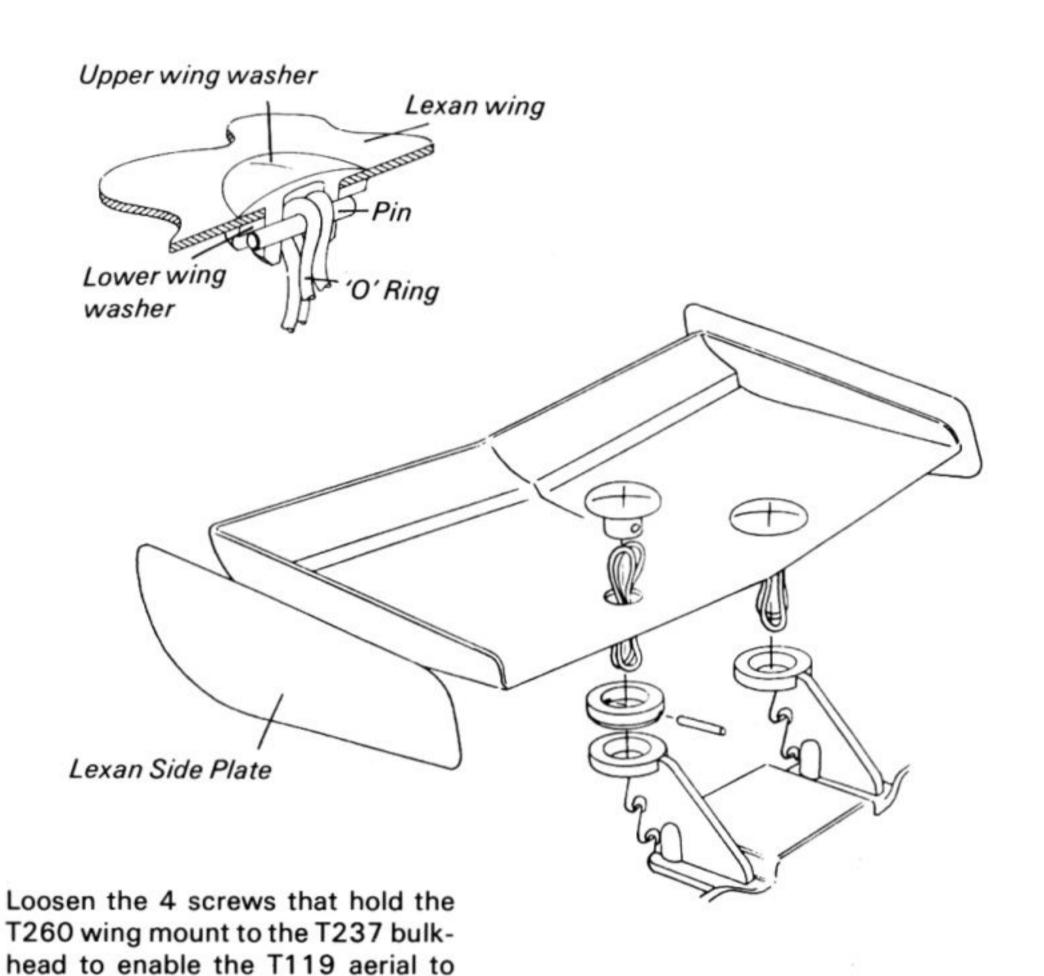

Cut out wing and side plates from lexan moulding and mask and paint as described for the bodyshell. Drill two holes 7mm dia in the positions shown. Insert T261 upper wing washer from the top and fit T262 lower wing washer from below. Insert two A190 'O' rings and A407 pin so that the 'O' rings and retained by the pin as shown in the cross section diagram. Repeat for the other hole. Fif wing to car by pushing 'O' rings through hole in T263 wing bracket and hooking over either of the lugs.


Fix wing sideplates using double sided tape.

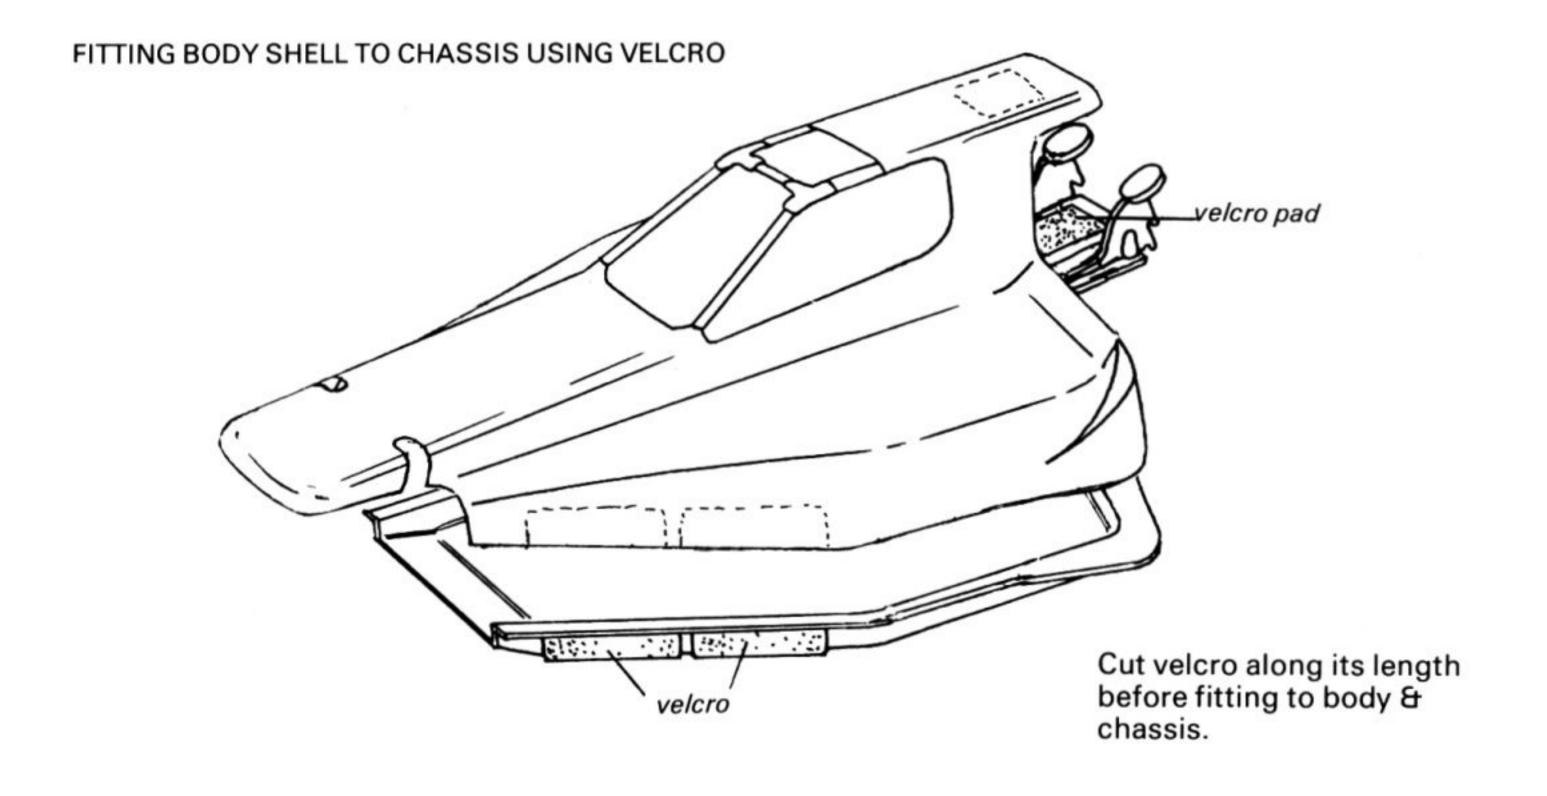

be inserted.



ARRANGEMENT OF RADIO EQUIPMENT

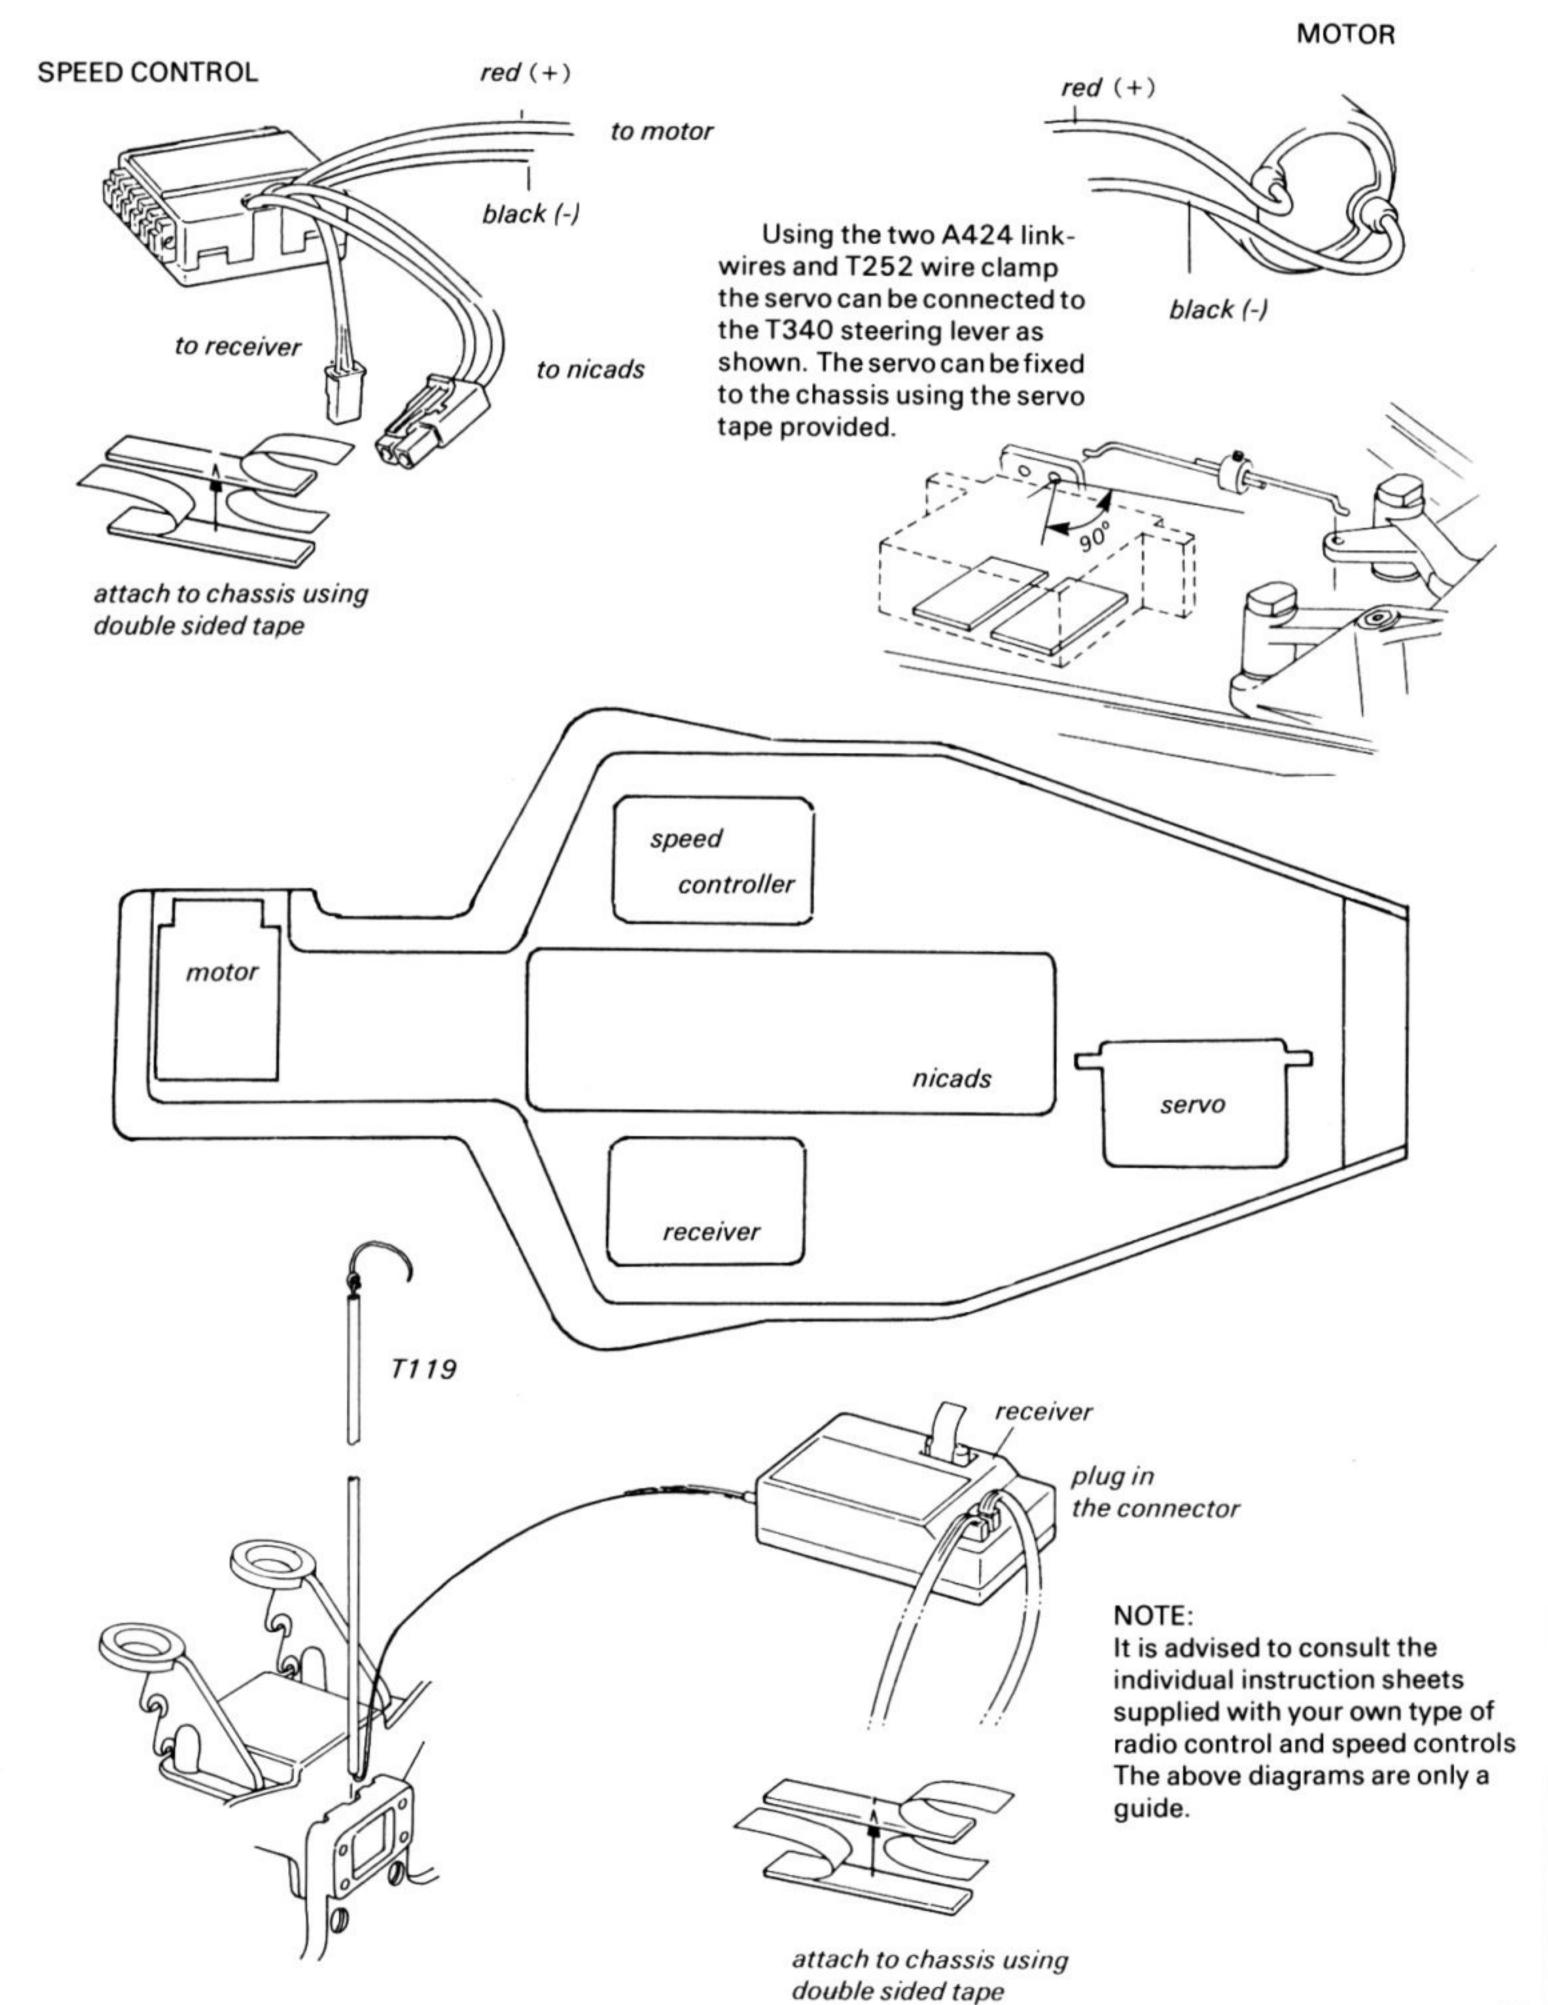




Make sure all screws are tight. Recheck after every race.

2) Differential adjustment

The differential should not slip under normal use. The correct tension is sufficient to give enough drive for the prevailing track conditions without slip and without excessive tension.

When you first run the car punch the throttle momentarily to find if there is slip, this sounds just like belt slip. If you have correctly adjusted the belt tension (Transmission Assembly section 14) then thighten differential until slip is eliminated. Tighten the differential by inserting a screwdriver in the slot of the rear axle (it should be located on the left side of the car) then turn the right rear wheel clockwise to tighten or anti-clockwise to loosen. When tightening make adjustment of no more than ½ turn at a time.

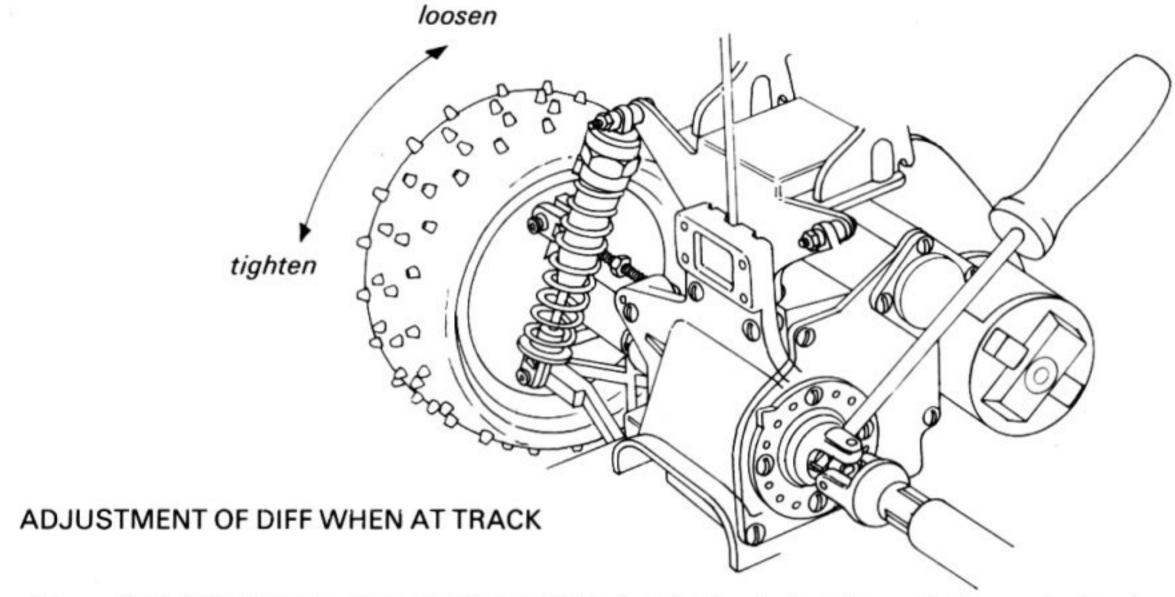

Belt Adjustment: If correctly assembled and adjusted as shown in Transmission Assembly paragraph 14
it is most unlikely that trackside adjustment will be required.

Never run with a slipping belt as both pulleys and belt can be damaged. Belt slip sounds like a tearing noise when the throttle is opened wide. Always recheck differential adjustment first as in Paragraph 2 because differential slip and belt slip sound very similar. To adjust, remove transmission assembly from the car by first removing the motor guard and then the 4 counter sunk screws from underneath and finally the two screws which pass through the bulkhead. Belt tension is then adjusted as in Transmission Assembly paragraph 14.

4) Rear - Camber:

The rear wheel should be set at 1-2 deg, negative camber. This means that the tops of the wheel lean inwards. Adjustment is carried out by turning the hexagon part of the top link. The left hand thread of the link is nearest the small groove in the hexagon. Turning this end clockwise will increase length and reduce camber, turn anti-clockwise to increase camber.

5) Front - Camber:

The front wheels should be set at 1-5 deg negative camber (adjust to be the same both sides). Generally the more negative camber, the more steering you will get at high and medium speeds. Too much negative camber and you will begin to have less steering. Run the camber control link to the inner hole on the fibre-glass bracket if you need more steering.

Toe in:

The front track rods are adjustable, similar to the top links at the rear. Set the front wheels up to be parallel to each other when pointing straight ahead.

If conditions are slippery add 1-2 deg toe-in this will make the car steer a little less. Toe-out will give more steering at low speed, but may make the car more unstable on corner exit.

Ackermann Effect:

The steering blocks have two holes for attaching the track rod end to, the hole nearest the centre of the car will give an increased Ackermann Effect and improve low speed steering and stability on low grip.

Rake Angle:

Rake angle, or kick-up on your COUGAR is adjustable, this angle is also the castor angle, less castor will give more turn-in but less steering on corner exit.



6) Front Shock Mounting: Mounting shock to outer hole will stiffen the suspension giving less 'Turn-in'.

7) Rear Shock Mounting:

The rear wishbone offers 4 mounting positions. Moving the shock outwards will stiffen the suspension and reduce 'drop', ideal for indoor (carpet), or to reduce the tendency for the car to turn over.

8) Damping

It is recommended that you start with 20w oil in all shock absorbers. Then experiment with different grades for different track conditions and driving styles.

9) Tyres:

The front and rear tyres in the kit will give safe predictable handling for normal conditions. However, Schumacher CAT range of tyres offer a wide range of options to cover all extremes of operating conditions. The spikes on the tyres may be cut to adjust the handling.

Refer to tyre specification sheet, page 1.

10) Gear rations for 5 minute Race Duration

	Approx. motor wind	Overall ratio	Pinion to gear Ratio	Gear	Pinion
	14T	12.14	5.000	95	19
A	'4'	11.99	4.942	92	19
11-4 84-4	15T	11.36	4.684	89	19
Hot Motor	101	10.99	4.526	86	19
		10.48	4.318	95	22
	17T	10.15	4.182	92	22
	P. 157 (157)	9.80	4.045	89	22
		9.49	3.909	86	22
	19T	9.23	3.800	95	25
1	1,000,000,00	8.94	3.68	92	25
		8.64	3.56	89	25
Mild Motor	21T	8.35	3.44	86	25
700 000 000 000 000 000	1000000000	8.23	3.393	95	28
₩		7.99	3.286	92	28
T	27T	7.72	3.178	89	28
		7.45	3.071	86	28

Dont forget car performance also depends on tyre diameter.

Most tyres are 85mm in diameter but minispike are 78mm diameter and need a reduction of approximately 10% on overall ratio to give the same car performance. In general cars run longer with smaller pinions. Excessively large pinions, particulary with hot i.e. low wind motors can cause overheating and damage. The gear ratio required will vary with race duration and track conditions so you must experiment for best results.

11) Lubrication:

All bearings must be lubricated, especially during wet weather. Always remove bearings and clean after running in wet conditions. A533 ballraces may be cleaned by carefully removing the seals with a knife blade under the outside edge and pressed back into place after cleaning. Black contact seals may be removed to reduce drag in clean conditions. WARNING: Some aerosol oils and degreasers will expand bearings seals causing drag. Plastic parts should not be lubricated. Drive belts MUST NOT be lubricated. Ball differentials and thrust races should only be lubricated with silicone grease.

12) General:

In general the car should understeer - this means the front wheels slide more than the rear wheels during cornering. You can get this by cutting the spikes of the front tyres down. It helps to have two or three sets of front tyres with different levels of spikes to test for the best option.

Run the lowest ride height that track conditions will allow - a low car always corners better than a high car. Use the softest damper settings that stop the wheels from bouncing. It is very easy to over damp the car and cause bouncing at speed.





KIT CONTENTS LIST

NO NO	SPARES NO	PART NO	DESCRIPTION	NO OFF
U415T	U415T		Cougar - 2WD Competition All Terrain	
		S602W	Instruction Book Set	1
	U583M	U583M	Body & Wing Moulding - Cougar	1
	U221D	T221C	Chassis Pan - 2WD	1
	U550F	T550E	Transmission Set - 2WD	1
	U552H	T552G	Rear Suspension Set - 2WD	1
	U558N	T558M	Front Suspension Set - Cougar	1
	U555K	T555J	Shock Absorbers - (Set 4)	1
		T5600	Wheels, Tyres & Aerial - Cougar	1
T550	U550F		Transmission Cougar - 2WD	
		T178	Transmission Housing	1
		T195	Drive Belt HTD 72 × 8mm Loose	1
		T215	Gear Cover	1
		T255	Motor Guard	1
		T179	Cover Plate	1
-		T180	Motor Plate	1
		T084	Rear Axle	1
-		A537	Oilite Bush (4 × 16 × 5)	2
		A536	Oilite Bearing (9 × 16 × 5)	2
		A539	Bearing Sleeve (5mm)	2
		T108	100000000000000000000000000000000000000	4
		140/614400 310/404040	U/J Pivot Assembly	1
		T131	U/J Assembly Tool F/G	
	U701A	T227	Layshaft - Rear	1
		T229	95T Gear 48DP	1
		T234	22T Pinion 48DP	1
	U/01A	T701	Cougar Pulley Set - 2WD	-
	U701A	T203	Diff. Pulley 51T × 10mm	1
		T196	21T Pulley - 2WD	1
		T197	Space Pulley	1
	U704D	T258	Pulley Flange	2
		T704	Drive Shaft Mouldings 2WD	\vdash
		T027	Drive Shaft - Male	2
		T028	Drive Shaft - Female	2
		T030	Wheel Hub	2
		T031	Rear Hub	2
		T517	Bearing Housing Moulding	
		T083	Bearing Housing Diff. Closed	1
		T081	Bearing Housing Rear Eccentric	2
		T082	Bearing Housing Diff. Open	1
	U700Z	T700	Cougar Transmission Fixings - 2WD	
		A035	St. St. Screws M3 × 6 Cp. Hd.	2
		A225	Steel Washer M3	2
		A301	Screw Self Tap No. 2 × 3/16 Pn. Hd.	12
		A323	Screw Self Tap No. 4 × 3/8 Pn. Hd.	8
		A326	Screw Self Tap No. 4 × 3/4 Pn. Hd.	2
		A040	St. St. Screw M3 × 20 Cp. Hd.	2
		A051	Nyloc Nut M3	3
		A154	Disc Spring 1/8 × 0.23 × 0.012	2

BAG NO	SPARES NO	PART NO	DESCRIPTION	NO OFF	
		A180	'O' Ring 1/8 × 1/16 Nitrile	1	
		A333	Self Screw Tap No. 4 × 3/8 Csk. Hd.	4	
		A304	Screw Self Tap No. 2 × 3/8 Pan Hd.	10	
		A141	Socket Wrench 1.5mm AF	1	
	U702B	T702	Diff. Repair Kit		
		A520	Thrust Race 1/8 × 5/16	1	
		A220	Thrust Washer 3/8 × 13/16 × 1/32	2	
		T118	Washer Carrier - Large	2	8
		T243	Friction Paper 3/8 × 13/16	2	
		A401	Needle Roller 1.5 dia. × 7.8mm	1	
		A500	Steel Ball 3.0mm dia.	15	
T552	U552H	10000000	Rear Suspension - Cougar - 2WD		
	0002	T199	Rear Hub Carrier	2	
		T268	Rear Wishbone	2	_
		T202	Pivot Block Rear Wishbone	4	
		T237	Bulkhead Topcat	1	
		T260	Shock & Wing Mount	1	_
_		A536		4	
			Oilite Bearing (9 × 16 × 5)		
	117000	A538	Bearing Sleeve (11mm)	2	_
	U703C	T703	Cougar Rear Susp. Small Parts - 2WD	+_+	
		A028	Steel Screw M3 × 16 Pn. Hd.	2	
		A030	Steel Screw M3 × 10 Pn. Hd.	2	_
		A010	Steel Screw M3 × 20 Pn. Hd.	2	
		A048	Steel Nut M3	3	
		A093	Stud M3 × 20 Pn. Hd.	2	
		A323	Screw Self Tap No. 4 × 3/8 Pn. Hd.	8	
		A326	Screw Self Tap No. 4 × 3/4 Pn. Hd.	2	
		A417	Rear Hub Carrier Pivot Pin	2	
		A412	St. St. Pin. 2.0 Dia. × 54mm	2	
		T328	Rose Joint Socket	4	
		T239	Rose Joint Ball	4	
		A143	Socket Wrench 2.5mm AF	1	
		A206	Nylon Washer 3.3 × 8.0 × 1.6mm	5	
	U712L		Wing Mount Kit - Topcat		
		A407	Needle Roller 1.5Dia. × 54mm	2	
		A190	'O' Ring 9.0 × 1.6mm	3	
		A323	Self Screw Tap No. 4 × 3/8 Pn. Hd.	2	
		T735	Wing Mount Mouldings		
		T263	Wing Bracket	2	
		T262	Lower Wing Washer	2	
		T261	Upper Wing Washer	2	
T558	U558N		Front Suspension Set - Cougar		
	U343Z	T343	Shock Mount F/G/ - Cougar	1	
	U724X	A533	Ball Bearing 8 × 16 × 5	2	
		T707	Front Suspension Small Parts - Cougar		
	U750X	T320	Ball Socket - Small	8	
	U750X	T321	Ball Stud	8	
		A010	Steel Screw M3 × 20 Pn. Hd.	2	





KIT CONTENTS LIST

NO	SPARES NO	NO NO	DESCRIPTION	NO OFF
		A039	St. St. Screw M3 × 16 Cap Hd.	4
		A048	Steel Nut M3	4
		A051	Nyloc Nut M3	2
		A326	Screw Self Tap No. 4 × 3/4 Pn. Hd.	2
		A038	St. St. Screw M3 × 12 Cap. Hd.	2
		A206	Nylon Washer 3.3 × 8.0 × 1.6	2
	U760H	A095	Turnbuckle Adjuster M3 × 45mm	4
		A302	Screw Self Tap No. 2 × 1/4 Pn. Hd.	8
		T709	Chassis Accessories - Cougar	
	U717Q	T252	Wire Clamp	1
	U717Q	A424	Link Wire	2
		A333	Screw Self Tap No. 4 × 3/8 Csk. Hd.	2
	U254K	T254	Nicad Holder & Strap	1
		A323	Screw Self Tap No. 4 × 3/8 Pan Hd.	2
	U122M	T122	Velcro	3
	U779A	G305	Servo Tape	1
	U627X	T627	Servo Saver Assembly	1
	U748V	T748	Front Suspension Pivot Set - Cougar	
		T339	Pivot - Inboard Fr. Wish Bone	2
		T228	Pivot - 1/8"	4
		T353	Shock Mount Bush	2
		A051	Nyloc Nut M3	2
	U727A	A103	'E' Clip 1/8"	12
		A039	St. St. Screw M3 × 16 Cap. Hd.	2
		A048	Steel Nut M3	2
	U729W	T749	Steering Pivot Set - Cougar	
		T342	Pivot Bush - Steering	2
		T242	Steering Lever Pivot	2
		A225	Steel Washer M3	4
		A023	Steel Screw M3 × 12 CSK. Hd.	2
		A032	Steel Screw M3 × 6 CH Hd.	2
	U774V	T774	Wishbones & Hub Mouldings - Cougar	
		T328	Steering Block	2
		T330	Wishbone - Front	2
		T336	Spacer - Rake Angle	4
		T338	Inner Hub & Nyloc Holder	2
		T202	Bearing Retainer	2
	U775W	T775	Front Plate & Steering Levers - Cougar	
		T322	Lower Suspension Plate	1
		T340	Steering Lever	1
		T341	Radius Arm	1
	U776X	T776	Top Bkt. Yokes, Centre Track Rod/Couga	r
		T323	Upper Suspension Plate	1
		T332	Steering Yoke R. H.	1
		T334	Steering Yoke L. H.	1
		T335	Centre Track Rod - Steering	1
T555	U555K		Shock Absorbers (Pk 4)	
		T059	Cap - Shock Absorber	4

BAG NO	SPARES NO	PART NO	DESCRIPTION	NO OFF	
		T060	Shock Body 16mm Stroke	2	
		T061	Shock Body 32mm Stroke	2	
		T133	Suspension Spring 0.045 × 11 × 2.5 Rear	2	
		T132	Suspension Spring 0.045 × 8 × 1.5 Front	2	
	U613J	T613	Spring Stops & Spacers Moulding		
		T090	Spring Stop	4	
		T092	Spacer 1mm	4	
		T093	Spacer 2mm	4	
		T094	Spacer 4mm	4	
		T095	Spacer 8mm	4	
	U637H	T637	Shock Pistons (Set of 4)		
		T096	Shock Absorber Piston (1sq. mm hole)	2	
		T097	Shock Absorber Piston (2 sq. mm hole)	2	
	U614K	T614	Shock Absorber Seals (4 Sets)		
		T158	Bush - Shock Absorber	4	
		T159	Seal Housing - Shock Absorber	4	
		A230	Stepped Washer	2	
		A208	Nylon Washer M3 × 0.8mm	2	
	U162A	T162	Diaphragm - Shock Absorber	4	_
	0.02.1	A103	'E' Clip 1/8"	12	
		A185	'O' Ring 5.1 × 1.6mm Nitrile	4	_
	U722V	A181	'O' Ring 1/8" × 1/16" - Silicone	8	
	OZZZV	A209	Black Washer	4	_
		A131	Internal Circlip 8.0 × 0.39mm	4	_
_		T778	Shock Absorber Small Parts	-	
				_	
		A038	St. St. Screw M3 × 12 Cap Hd.	2	
		A039	St. St. Screw M3 × 16 Cap Hd.	2	
		A048	Steel Nut M3	2	
		A051	Nyloc Nut M3	2	
	U062E	T062	Piston Rod - 16mm Stroke	2	
	U063F	T063	Piston Rod - 32mm Stroke	2	
		T117	Spacer Tube	1	
	U728B	T238	Rose Joint - Socket	4	
	U728B	T239	Rose Joint - Ball	4	
	U584N	S602	Instruction Book Set - Cougar		
	U777Y	S603	Decal Sheet - Cougar	1	
		S604	Window Spray Masks - Cougar	1	
T560			Wheels, Tyres & Aerial		
	U224G	T224	Front Wheel	2	
	U225H	T225	Rear Wheel	2	
	U119J	T119	Aerial Tube	1	
	T679W	T679	Cat Rear Tyre - 15 x 12 Mini Sp-Blue	2	
	T655Y	T655	Cat Front Tyre 2 × 20 Stud-Blue	2	
or	T698P	T698	Cat Front Tyre - RIB - Blue	2	



Advancing the Sport - Improving the Breed

Into the spotlight comes the Schumacher Pro-Cat. From the same team that developed the World Championship winning 4WD Cat and innovative 2WD Topcat, the Pro-Cat has been designed for all levels of competitor to be the ultimate in 4WD 1/10 scale off road racers straight from the box.

> Damage Resistant Rear Wing New Layshaft and Drum Differential

> > Improved Chassis Layout

48 DP Quick Release Gear

> Front Drive Belt Adjuster Scre

Quick Release Nicad Strap

New Rear Suspension



RACING PRODUCT FROM

Manufactured and Distributed by: SCHUMACHER RACING PRODUCTS LTD HANSON BUSINESS PARK, 71-73 TENTER ROAD, MOULTON PARK, NORTHAMPTON, NN3 1AX

Performance and technology that YOU CAN BUY!